

464 PLUS HOME COMPUTER
6128 PLUS HOME COMPUTER
GX4000 GAMES CONSOLE
MM 12 MONOCHROME MONITOR
CM 14 COLOUR MONITOR

SERVICE MANUAL

CONTENTS	Page
Safety Tests	2
464 PLUS SECTION	3
Electrical Adjustments	4
Main/Cassette/Hold/LED P.C.B. (Top View)	5
Main/Cassette/Hold/LED P.C.B. (Bottom View) Tape P.C.B.	6
Gate Array/Output Interface Schematic Diagram	6 7
CPU/Connection Interface Schematic Diagram	8
Video Conversion/Memory Schematic Diagram	9
Cassette Interface Schematic Diagram	10
Key Matrix (Applies to 464 & 6128)	11
Mechanical Exploded View & Parts List	12
Deck Exploded View	13
Electrical Parts List	14
6128 PLUS SECTION	15
Electrical Adjustment	15
Main/Cassette Hold/LED P.C.B. (Top View)	16
Main/Cassette Hold/LED P.C.B. (Bottom View)	17
Gate Array/Output Interface Schematic Diagram CPU/Connection Interface Schematic Diagram	18 19
Video Conversion/Memory Schematic Diagram	20
Mechanical Exploded View & Parts List	21
Electrical Parts List	22
GX4000 SECTION	23
Electrical Adjustment	23
Main P.C.B. (Top View)	24
Main P.C.B. (Bottom View)	25
Gate Array/Output Interface Schematic Diagram	26
CPU/Connection Interface Schematic Diagram	27
Video Conversion/Memory Schematic Diagram	28
Power Regulator Schematic Diagram RGB Convertor Schematic Diagram	29 30
Cabinet Exploded View & Parts List	31
Main P.C.B. (FRANCE) (Top View)	32
Main P.C.B. (FRANCE) (Bottom View)	33
Power Regulator Schematic Diagram (FRANCE)	34
Output Interface Schematic Diagram (FRANCE)	35
Electrical Parts List	36
MM-12 SECTION	37
Electrical Adjustments	37
Monitor/CRT P.C.B. Component Layout	38
Cabinet & Parts List	39
Monitor/CRT Schematic Diagram Electrical Parts List	40, 41 42
CM-14 SECTION	42
Electrical Adjustments	44 - 46
Electrical Parts List	47, 48
Monitor/CRT P.C.B. (Component Layout)	49
Power/Sound Schematic Diagram	50
Monitor Schematic Diagram	51
Cabinet Exploded View & Parts List	52

NOTE TO ENGINEERS

Please Note: That RP11 Diagnostic Rom Cartridge is available to diagnose fault conditions on this range of home computers. Full instructions and analysis is made in the user instruction manual.

SAFETY TEST

All monitors are tested to the following specifications.

- Flash Test: Test at 1.5kV RMS / 3 sec between the live and neutral poles of the mains lead and all accessible metal points on the exterior of the set.
- 2. Insulation Resistance Test: Test at 1.5kV RMS/3 sec between the live and neutral poles of the mains lead and all accessible metal points on the exterior of the set to show a resistance greater than 4Mohms.
- 3. Earth Continuity Test: The resistance of the mains lead shall not exceed 0.5ohms.

PLEASE NOTE: When any work is completed on this unit, correct safety tests must be carried out to ensure continued electrical safety.

PLEASE NOTE: All parts shown with the part number prefix (!) are Safety Items and must be replaced with similar items having an identical safety specification.

All those items may be purchased direct from AMSTRAD plc.

In keeping with our policy of continually improving our service, and the technical quality of our products, we reserve the right to change component types, manufacturers, sources of supply or technical specification at any time.

464 PLUS TECHNICAL SPECIFICATION

LSI CHIPS

Z80A processor running at 4MHz.

64K of RAM (over 41K available when using BASIC).

128K byte ROM cartridge containing BASIC firmware and "Burnin"

Rubber" game.

GI AY-3-8912 3 voice, 8 octave sound generator chip. Application Specific Integrated Circuit (ASIC) containing 18,000 gates. Includes emulation of 6845 video controller and 8255 parallel peripheral interface. Chip also contains 16,000 bits of storage for sprite data.

DISPLAY SPECIFICATION (BASIC)

Display Mode	Mode 1	Mode 2	Mode 3
No. of colours	4 from 27	2 from 27	16 from 27
Vertical dots	200	200	200
Horiz. dots	320	640	160
Characters	40 × 25	80 × 25	20 × 25

DISPLAY SPECIFICATION (CARTRIDGE GAMES)

16 mode independent sprites are available in 16 different colours from those used to draw the main screen.

Both sprite colours and main screen colours may now be chosen from a palette of 4096. (16 levels of Red, Green and Blue).

Display Mode	Mode 1	Mode 2	Mode 3
No. of colours	4 from 4096	2 from 4096	16 from 4096
No. Sprites	16	16	16
Sprite colours	16 from 4096	16 from 4096	16 from 4096

EXTRA FEATURES (CARTRIDGE GAMES)

Analogue joystick support.

Soft Scroll allows pixel-wise movement in vertical and horizontal for fast action games.

Split Screen allows two separate areas to be displayed at once alleviating the need to re-draw score bars etc.

DMA driven sound allows tunes to play without processor intervention. Raster Interrupt allows games to change mode and colours at fixed points on the screen.

74 keys - QWERTY style, numeric cluster, cursor and copy cursor, large enter, shift, caps lock, tab, escape, delete, clear, control.

DATACORDER

Write speed software selectable - 1K baud or 2K baud, read speed automatically established by software. Write protect interlock. Motor on/off controlled by software.

ADD-ON ABILITY

8 bit Centronics compatible printer.

1 or 2 digital joysticks or paddles.

IBM Standard analogue joystick. (Some cartridge games). Light gun.

Various peripherals.

ROM cartridge up to 512K byte capacity.

EXTERNAL SOCKETS

3.5 mm stereo jack plug for connection to external amplifier.

2 × 9 Pin D-type digital paddle/joystick connectors.

15 Pin D-type analogue joystick connector (IBM Standard). RJ11 "telephone" jack for connection of light gun.

25 way D-type connector for 8 bit Centronics interface.

50 way Amphenol style connector with full Z80 bus for addition of other devices (e.g. serial interface).

8 Pin DIN socket for RGB, sync, Luminance and stereo sound

connection to monitor.

5 mm socket for connection of 5V power supply for monitor.

DIMENSIONS mm (approx.)

	Width	Height	Depth	
Computer	398	46	297	
MM12 mono motor	329	308	307	
CM14 colour monitor	377	348	360	
Paddle controller	124	22	56	

POWER SUPPLY


MM12 Monitor: 240V AC (UK), 220V AC (Europe) 50Hz.

CM14 Monitor: 220-240V AC 50Hz.

ELECTRICAL ADJUSTMENTS


AZIMUTH

Connect the probe of oscilloscope to jumper line (A).
 Insert the tast tape(MTT-113, 6.34KHz) for adjustment into the deck.
 Press the PLAY button to operate the tape.
 Adjust the screw (1) to maximize the waveform as shown below.

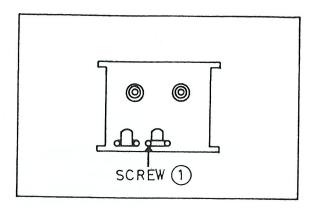


LUMI. SIGNAL OUTPUT LEVEL


1. Connect the oscilloscope to 3 pin of J102. 2. Adjust VR101 so that the signal becomes 1.65V as shown in Fig. 1.

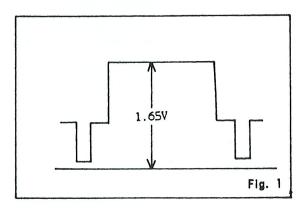

MAJOR COMPONENTS LOCATION GUIDE

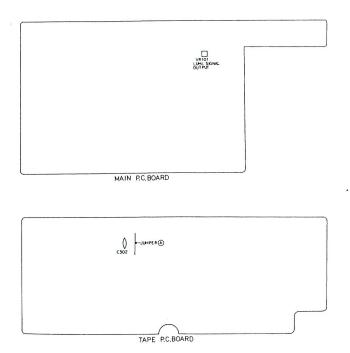



MAIN/CASSETTE HOLD/LED

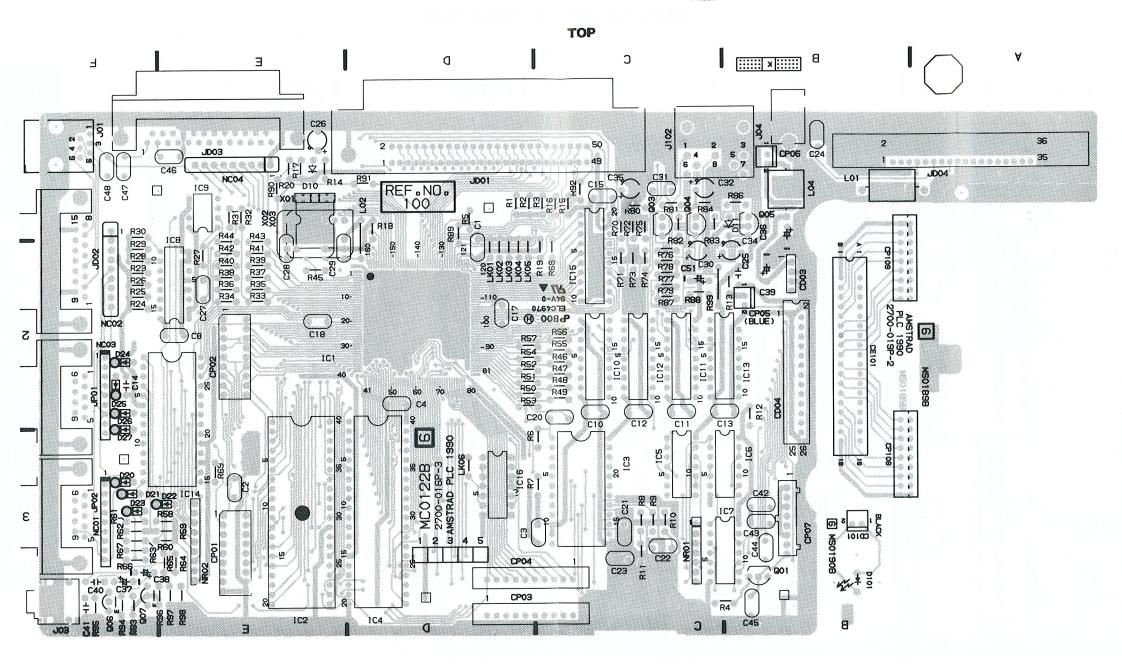


MAIN/CASSETTE HOLD/LED


TAPE

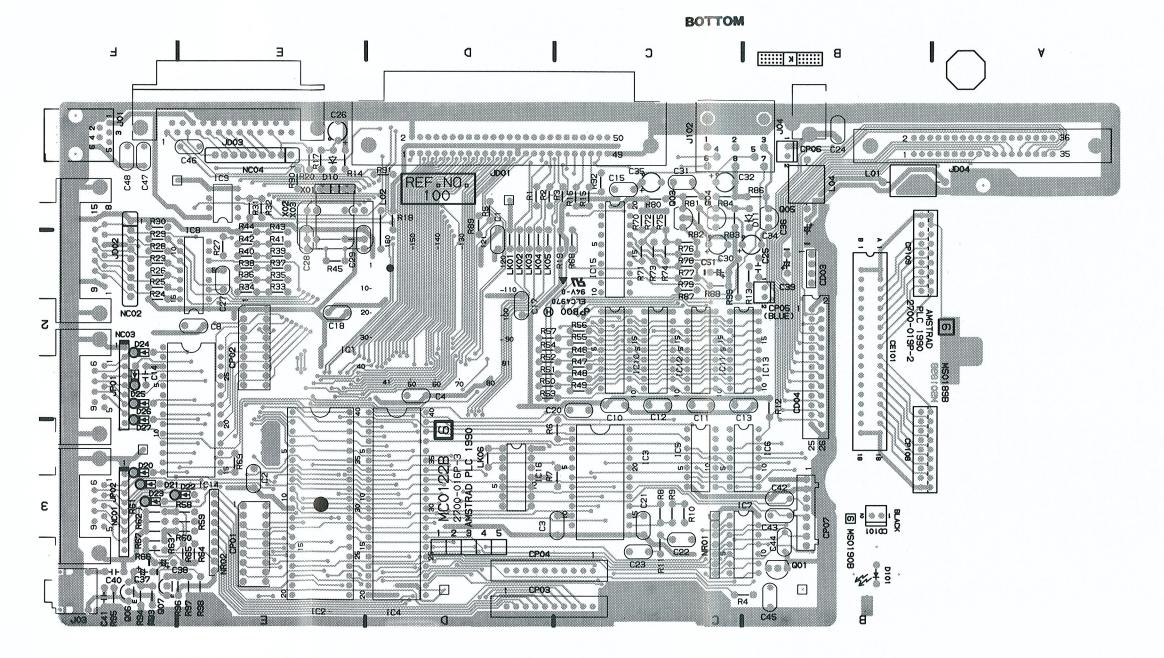

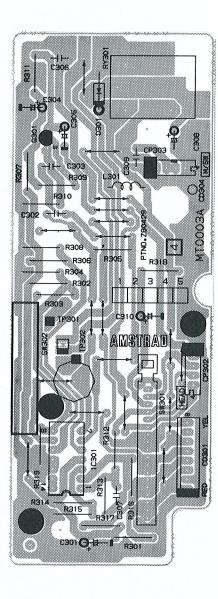

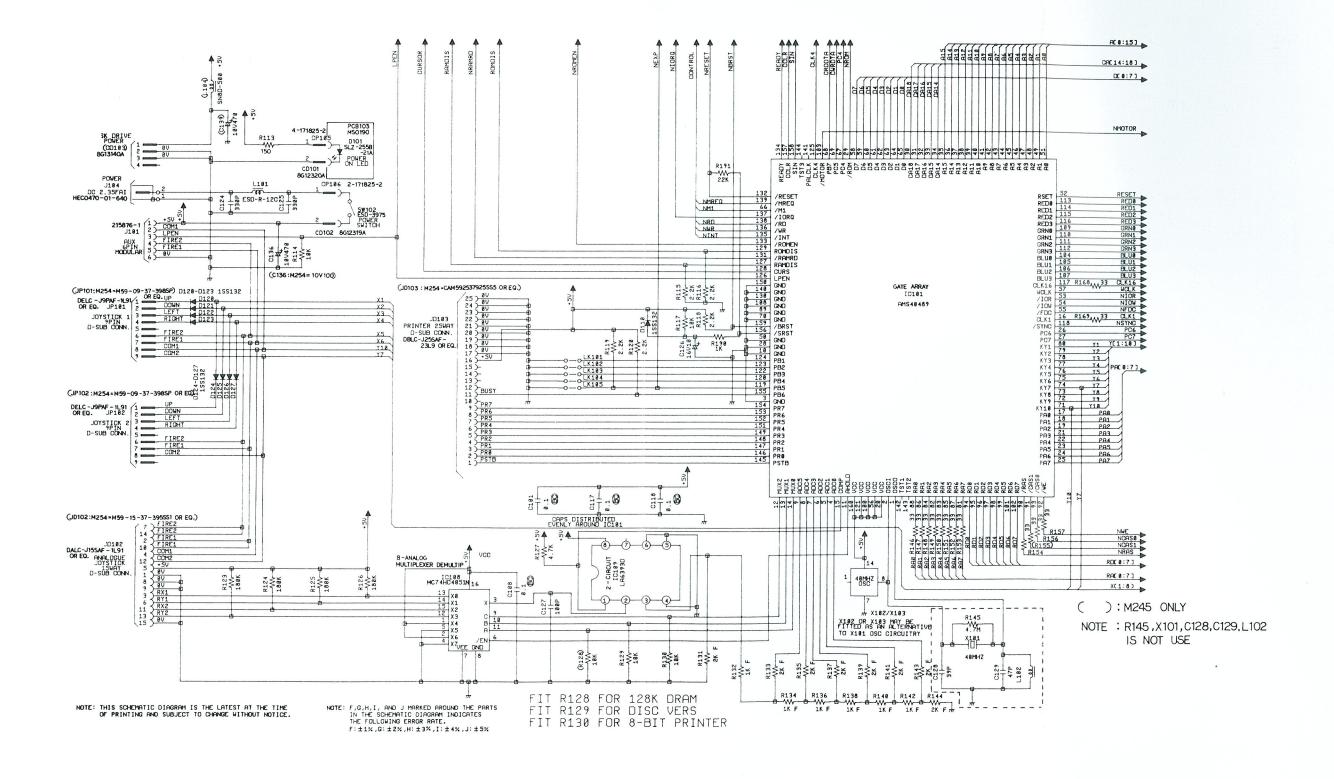


CPU / CONNECTION INTERFACE SCHEMATIC DIAGRAM

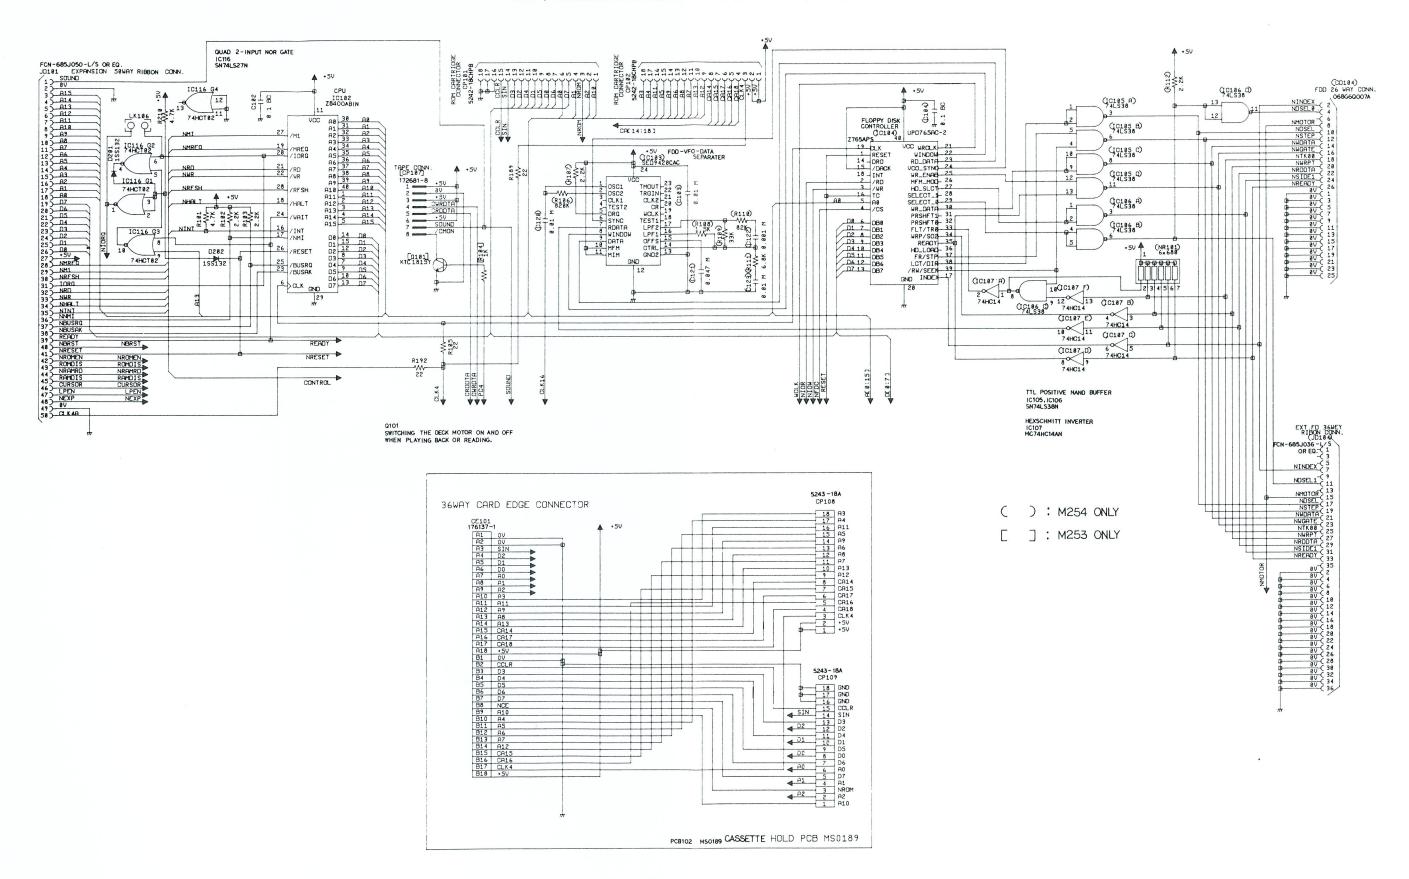


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

VIDEO CONVERSION / MEMORY SCHEMATIC DIAGRAM

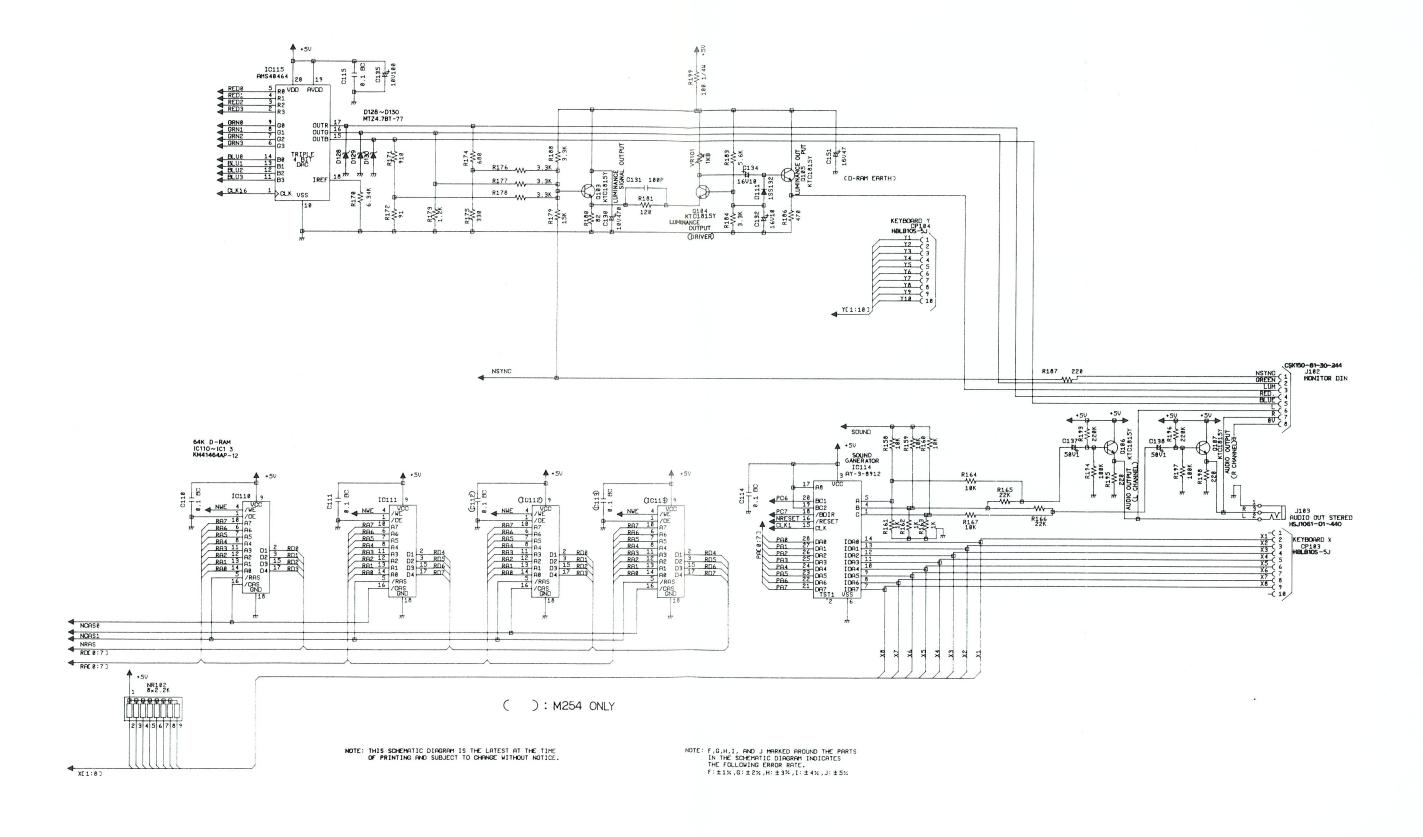

SCHEMATIC DIAGRAM CASSETTE INTERFACE

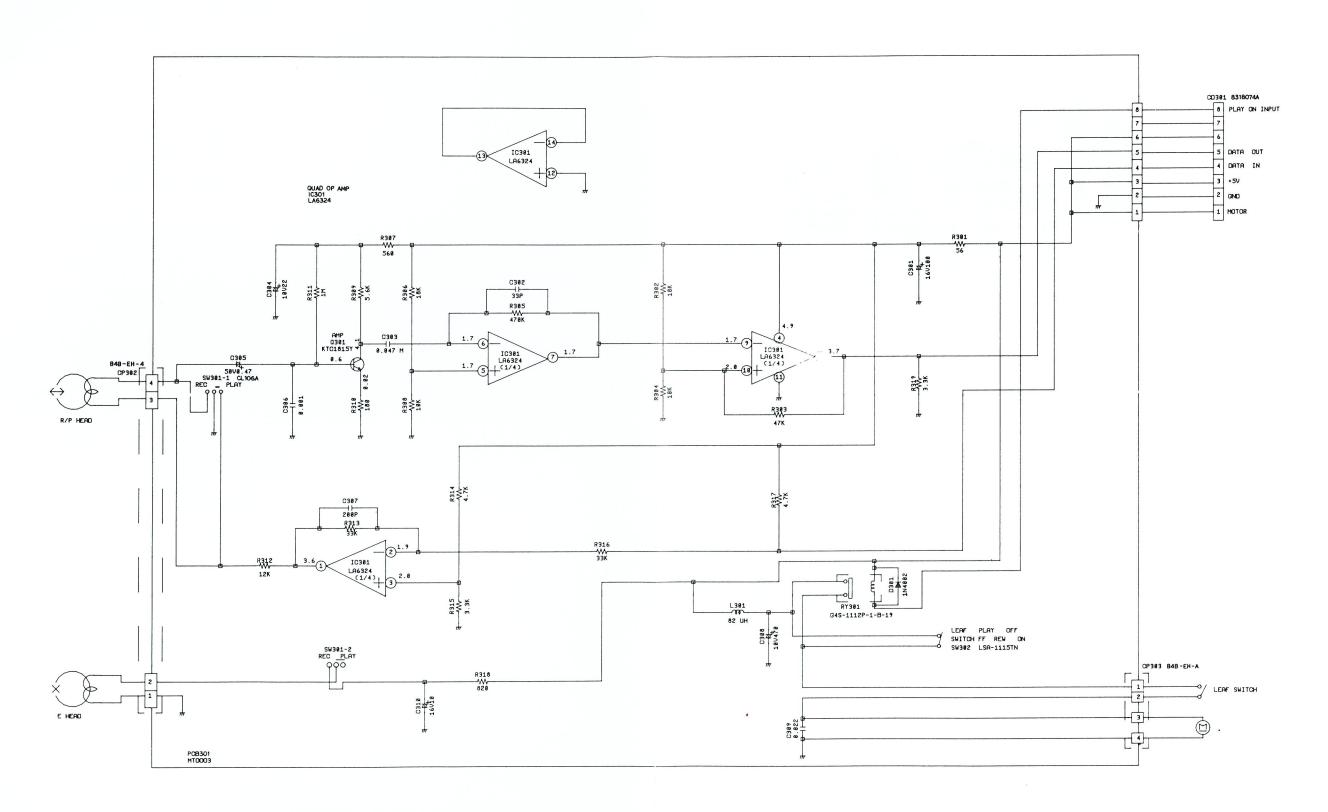

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


KEY MATRIX (Applies to 464 & 6128)

(1) 11	(2)— Y2	(3)————————————————————————————————————	(4) — Y4	OVE CP (5)	R FLEX 104 ©	7)— 47	(8)— Y8	9)— Y9	10— Y10	÷	NO.	
		() []	⇒Ħ	O I	∞ ∩	σ ∞	(1)			×1	<u> </u>	
	COPY			9)	硼	(л №	w#	N 4		X2	—w	
	f 7	RETURN	©			J				×s	<u> </u>	UNDER CP10
+ 9	→ ∞			 	_<					× 4	—(s)	UNDER FLEX CP103
+	- (J	7	. +				M			X5	- (0)	
+ W	>	SHIF	•• *						·	X 6		
	7	/.	\.		Z					X7	<u>@</u>	
•		CONTROL	• ~		SPACE		>			×8	<u> </u>	

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


SW101 ESU44LN027AA

MECHANICAL EXPLODED VIEW

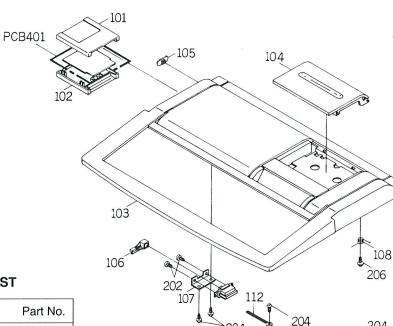


CPC 464 PLUS CABINET PARTS LIST

Ref. No.	Description	Part No.
Cabinet Parts		
101	Cartridge ASSY (UK)	270778
101	Cartridge ASSY (Spain)	270797
101	Cartridge ASSY (France)	270796
103	Cabinet Top ASSY	270773
	Cabinet Top	
	Plate Brand	
	Plate Reflection	070777
104	Lid Cassette	270777
	Plate Cassette Lid	
105	Button Power (A)	271618
106	Button Power (B)	271619
107	Bracket Power Switch	271620
108	Spring Cassette Lid	
109	Button Deck (REC)	270859
110	Button Deck	270776
111	Spacer Button Deck	270806
112	Cord Clamp No PEC-034-0	
113	Cabinet Bottom Assy	270774
	Leg Rubber	
	Sheet Rating	

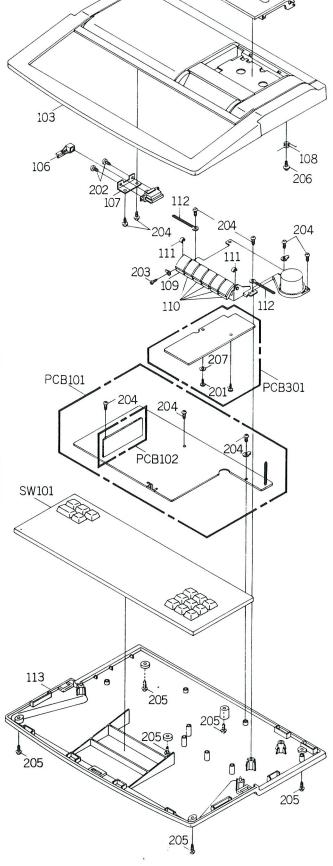

DECK EXPLODED VIEW

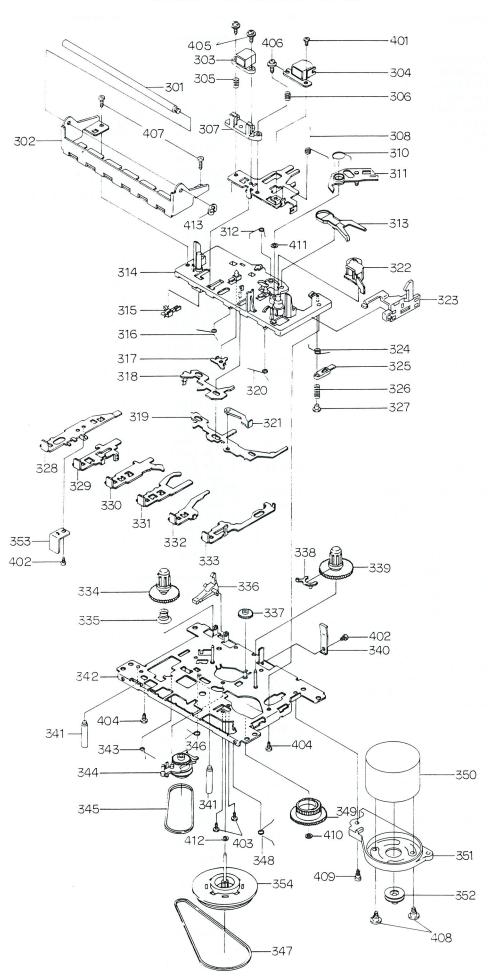

464 PLUS ELECTRICAL PARTS LIST

Dof No	Description	Dent Ne
Ref. No.	Description	Part No.
IC's IC101 IC102 IC108 IC109 IC110, 111 IC114 IC115 IC116 IC301	IC AMS40489 IC Z8400AB1N IC MC74HC4051N IC LA6393D IC KM41464AP-12 IC AY-3-8912 IC AMS40464 IC PC74HCTO2P IC LA6324	40489 40080 270752 270997 40239 40001 40464 270999 170112
Transistor		
Q101, 103-107, 301	TR KTC1815 Y-T	170447
Diodes		
D101 D110, 111, 120-127,	D LED SLZ-255B-21A/BT1 D 1SS132T-77	170866 171582
201, 202 D128-130 D301	D MTZ4.7BT-77 ZENER D 1N4002 RECT	175021 175440
Coils and Induc	etors	
L101 L301	Filter Line ESD-R-12C Coil Inductor LAL03TA820K	270751 270798
Switches		
SW101	Switch Keyboard ESU44LN027AA (UK)	270779
SW101	Switch Keyboard ESU44LN027DA (Spain)	270795
SW101	Switch Keyboard	270794
SW102 SW301 SW302	ESU44LN027CA (France) Switch Slide ESD-3975 Switch Slide CL106A Switch Leaf LSA-1115TN	170002 270753 270755
PCB's		
PCB101 PCB102 PCB103 PCB301 PCB401	PCB ASSY MC0122 PCB ASSY MS0189 PCB ASSY MS0190 PCB ASSY MT0003 PCB ASSY MC0121	
Miscellaneous		
NR102 PD001 RY301 X102 CTD01 345 347 350	Res. Network EXB-P88222J Paddle 140Z001-40991 Relay G4S-1112P-1-B-19 Crystal CX0-824C 40MHz Cassette Deck TN-21ZH-754 RF Belt Main Belt Motor	270800 270792 170123 270772 270775 270805 270807 270858
Jacks		
J101 J102 J103	Jack Modular 215876-1 Jack Din CSK150-81-30-244 Jack RCA 3.5 HSJ1061-01-440	271010 271011 271012
J104 J105	Jack DC HEC0470-01-640 Socket IC DILB40P-1115TN	271008
Variable Resisto	ors	
VR101 VRSF	VG042M102	271609


Ref. No.	Description	Part No.				
Resistors: Carb	on ¹/6W					
22 OHM 33 OHM 82 OHM 91 OHM 120 OHM 150 OHM 220 OHM 330 OHM 470 OHM 680 OHM 910 OHM 1.2K OHM 1.2K OHM 1.1K OHM 3.3K OHM 4.7K OHM 5.6K OHM 10K OHM	R105, 189, 192 R146-154, 156, 157, 168, 169 R180 R172 R181 R113 R187, 195, 198 R175 R186 R174, 182 R171 R104, 161-163, 190 R173 R102, 103, 115, 116, 118-120 R176-178, 184, 188 R101, 127, 210 R183 R114, 117, 129, 130, 158-160, 164, 167 R179 R165, 166, 191 R194, 197	152156 152158 152164 152165 152167 152168 152170 152172 152174 152176 250430 152179 152180 152183 152185 152188 152189 152194				
180K OHM	R123-126	152212				
220K OHM	R193, 196	152213				
Resistors: Carb		240507				
100 OHM 100 OHM 560 OHM 820 OHM 4.7K OHM 5.6K OHM 10K OHM 12K OHM 18K OHM 33K OHM 47K OHM 47OK OHM	R301 R310 R307 R318 R315, 319 R314, 317 R309 R304, 308 R312 R302, 306 R313, 316 R303 R305 R311	240507 193588 193196 10054 193597 240510 10079 240511 10087 193700 193703 240512 193708 193710				
Resistors: Meta	I 1/6W					
1K OHM	R132, 134, 136, 138,	271025				
2K OHM	140, 142 R131, 133, 135, 137, 139,	271026				
6.34K OHM	141, 143, 144 R170	270785				
Capacitors: Cer	amic					
33PF 50V 100PF 50V 200PF 50V 330PF 50V 0.001UF 50V 0.022UF 50V 0.1UF 12V	C302 C127, 131 C307 C124, 125 C306 C309 C101, 102, 108, 110, 111, 114, 115, 117, 118, 401	150514 24016 240234 193722 157679 21027 175181				
Capacitors: Electrolytic						
0.47UF 50V 1UF 50V 1OUF 16V 22UF 10V 47UF 16V 100UF 10V 470UF 10V	C305 C137, 138 C126, 132, 134, 310 C304 C151 C135 C301 C130, 136, 308	157670 157563 157581 270042 157629 193226 157568 270963				
Capacitors: Poly	yester					
0.047UF 10V	C1303	170442				
	7					

6128 ELECTRICAL ADJUSTMENT


LUMI. SIGNAL OUTPUT LEVEL

1. Connect the oscilloscope to 3 pin of J102.

2. Adjust VR101 so that the signal becomes 1.65V as shown in Fig. 1.

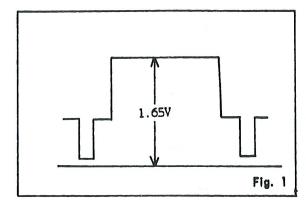

MAJOR COMPONENTS LOCATION GUIDE

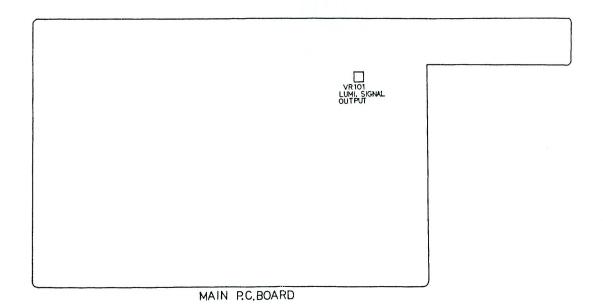

SECTION

6128 PLUS TECHNICAL **SPECIFICATION**

LSI CHIPS

Z80A processor running at 4MHz.

128K of RAM arranged in two 64K banks (over 41K available when using BASIC, 61K available to CP/M Plus).

128K byte ROM cartridge containing BASIC firmware and "Burnin" Rubber" game.

GI AY-3-8912 3 voice, 8 octave sound generator chip.
Application Specific Integrated Circuit (ASIC) containing 18,000 gates. Includes emulation of 6845 video controller and 8255 parallel peripheral interface. Chip also contains 16,000 bits of storage for sprite data.

upd765A disk controller.

3" 170K built-in disk drive compatible with CPC models. Supplied disk contains CP/M Plus operating system.

36 way Amphenol connector for second disk drive.

DISPLAY SPECIFICATION (BASIC)

Display Mode	Mode 1	Mode 2	Mode 3
No. of colours Vertical dots Horiz, dots	4 from 27 200 320	2 from 27 200 640	16 from 27 200 160
Characters	40 × 25	80 × 25	20 × 25

DISPLAY SPECIFICATION (CARTRIDGE GAMES)

16 mode independent sprites are available in 16 different colours from those used to draw the main screen.

Both sprite colours and main screen colours may now be chosen from a palette of 4096. (16 levels of Red, Green and Blue).

Display Mode	Mode 1	Mode 2	Mode 3
No. of colours No. Sprites Sprite colours	4 from 4096 16 16 from 4096	2 from 4096 16 16 from 4096	16 from 4096 16 16 from 4096

EXTRA FEATURES (CARTRIDGE GAMES)

Analogue joystick support.

Soft Scroll allows pixel-wise movement in vertical and horizontal for fast action games.

Split Screen allows two separate areas to be displayed at once alleviating the need to re-draw score bars etc.

DMA driven sound allows tunes to play without processor intervention. Raster Interrupt allows games to change mode and colours at fixed points on the screen.

74 keys - QWERTY style, numeric cluster, cursor and copy cursor, large enter, shift, caps lock, tab, escape, delete, clear, control.

Write speed software selectable - 1K baud or 2K baud, read speed automatically established by software. Write protect interlock. Motor on/off controlled by software.

ADD-ON ABILITY

8 bit Centronics compatible printer.

1 or 2 digital joysticks or paddles.

IBM Standard analogue joystick. (Some cartridge games). Light gun.

Various peripherals.

ROM cartridge up to 512K byte capacity.

EXTERNAL SOCKETS

3.5 mm stereo jack plug for connection to external amplifier.

2 × 9 Pin D-type digital paddle/joystick connectors.

15 Pin D-type analogue joystick connector (IBM Standard).

RJ11 "telephone" jack for connection of light gun.

25 way D-type connector for 8 bit Centronics interface.

50 way Amphenol style connector with full Z80 bus for addition of other devices (e.g. serial interface).

8 Pin DIN socket for RGB, sync, Luminance and stereo sound

connection to monitor. 5 mm socket for connection of 5V power supply for monitor.

DIMENSIONS mm (approx.)

· ·	,			
	Width	Height	Depth	
Computer	398	46	297	
MM12 mono motor	329	308	307	
CM14 colour monitor	377	348	360	
Paddle controller	124	22	56	


POWER SUPPLY

MM12 Monitor: 240V AC (UK), 220V AC (Europe) 50Hz.


CM14 Monitor: 220-240V AC 50Hz.


15

PRINTED CIRCUIT BOARDS MAIN/CASSETTE HOLD/LED

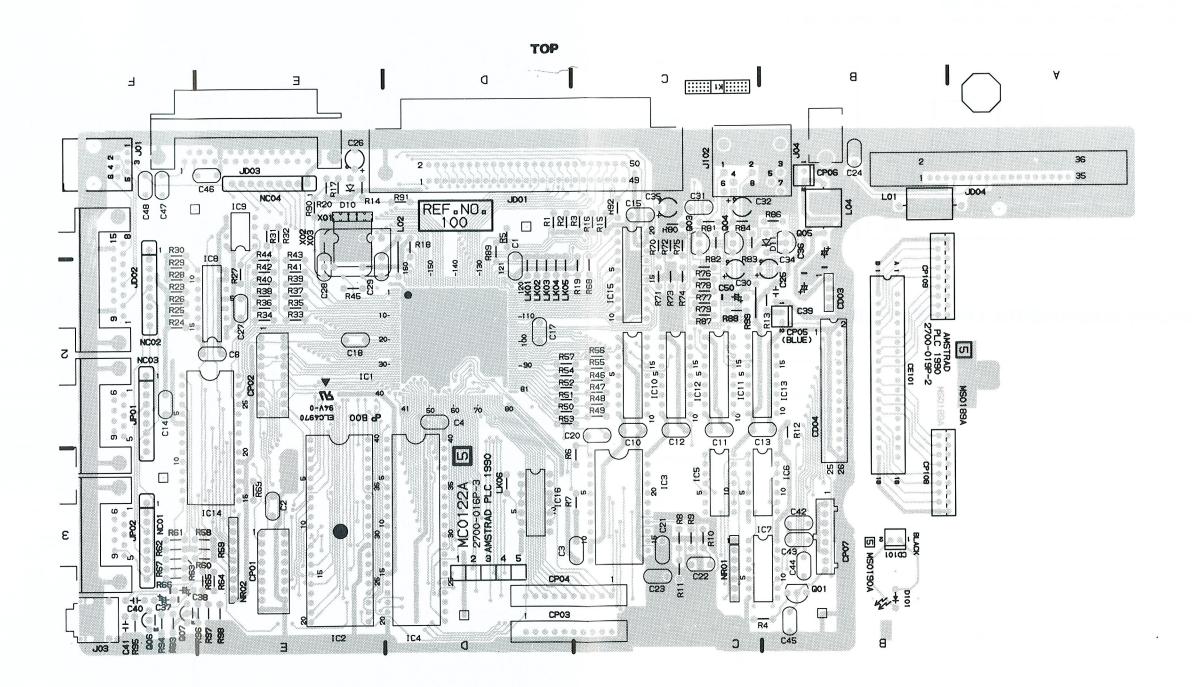


PRINTED CIRCUIT BOARD MAIN/CASSETTE HOLD/LED

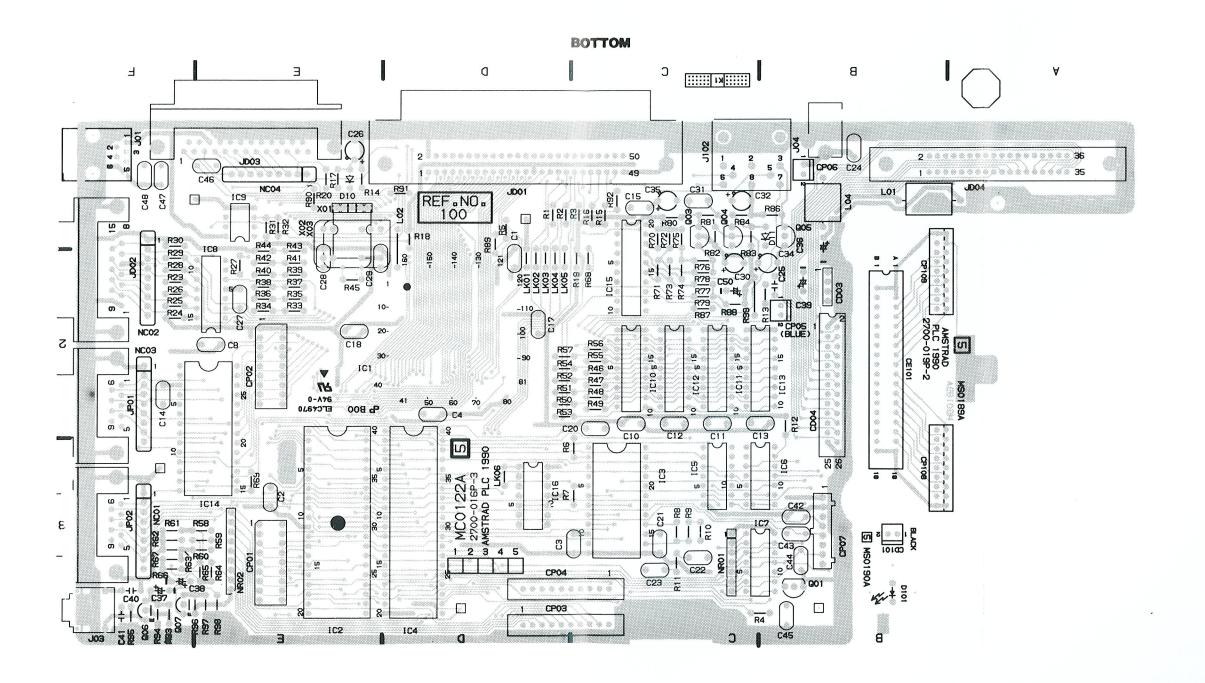

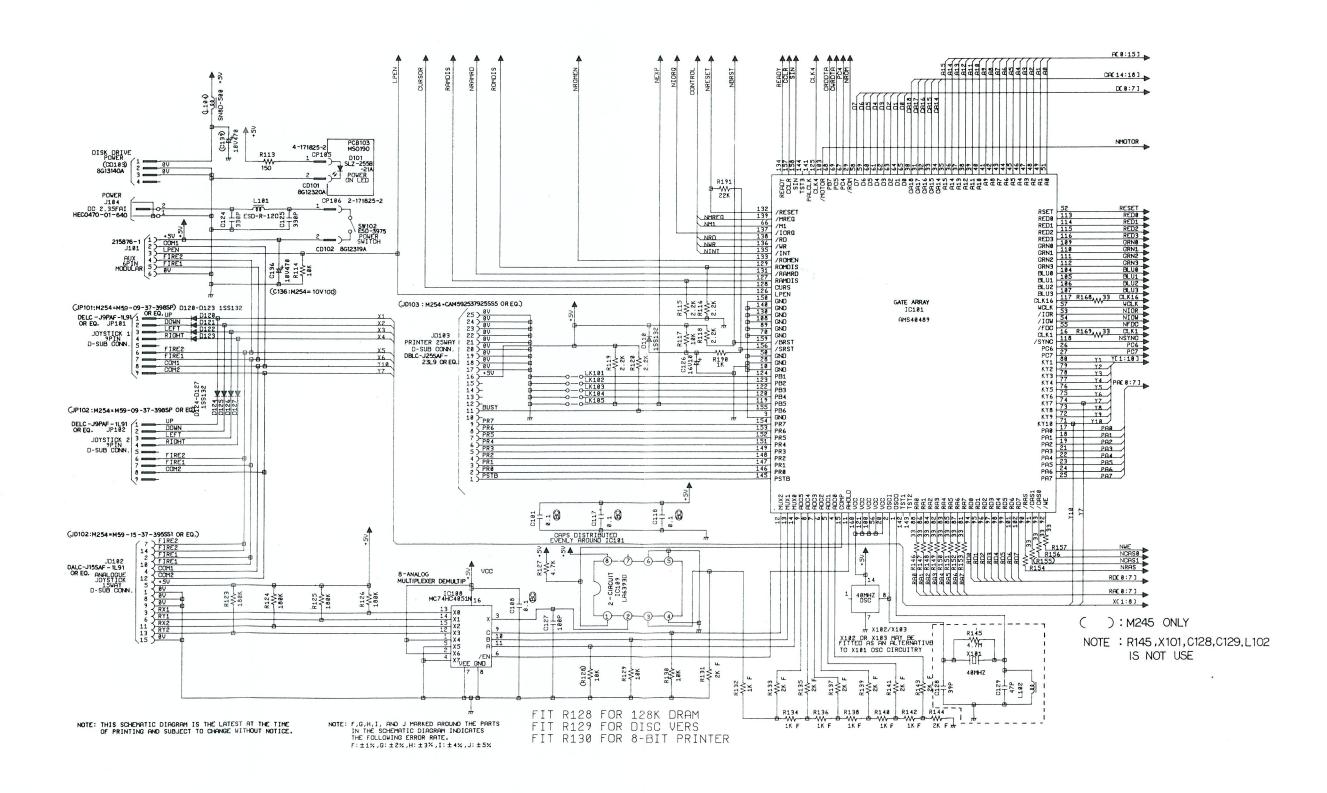


CPU / CONNECTION INTERFACE SCHEMATIC DIAGRAM

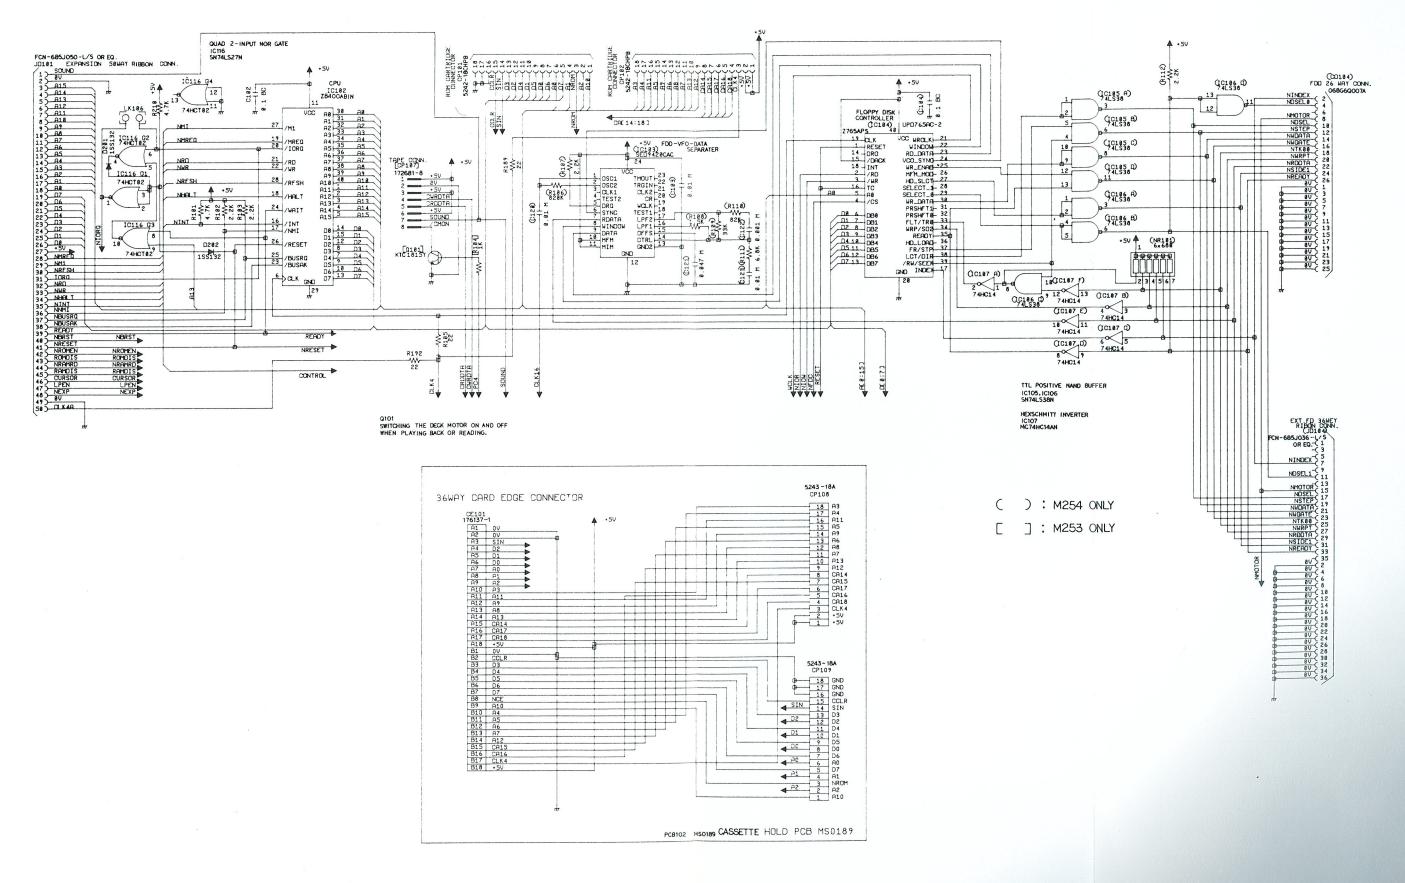


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

VIDEO CONVERSION / MEMORY SCHEMATIC DIAGRAM

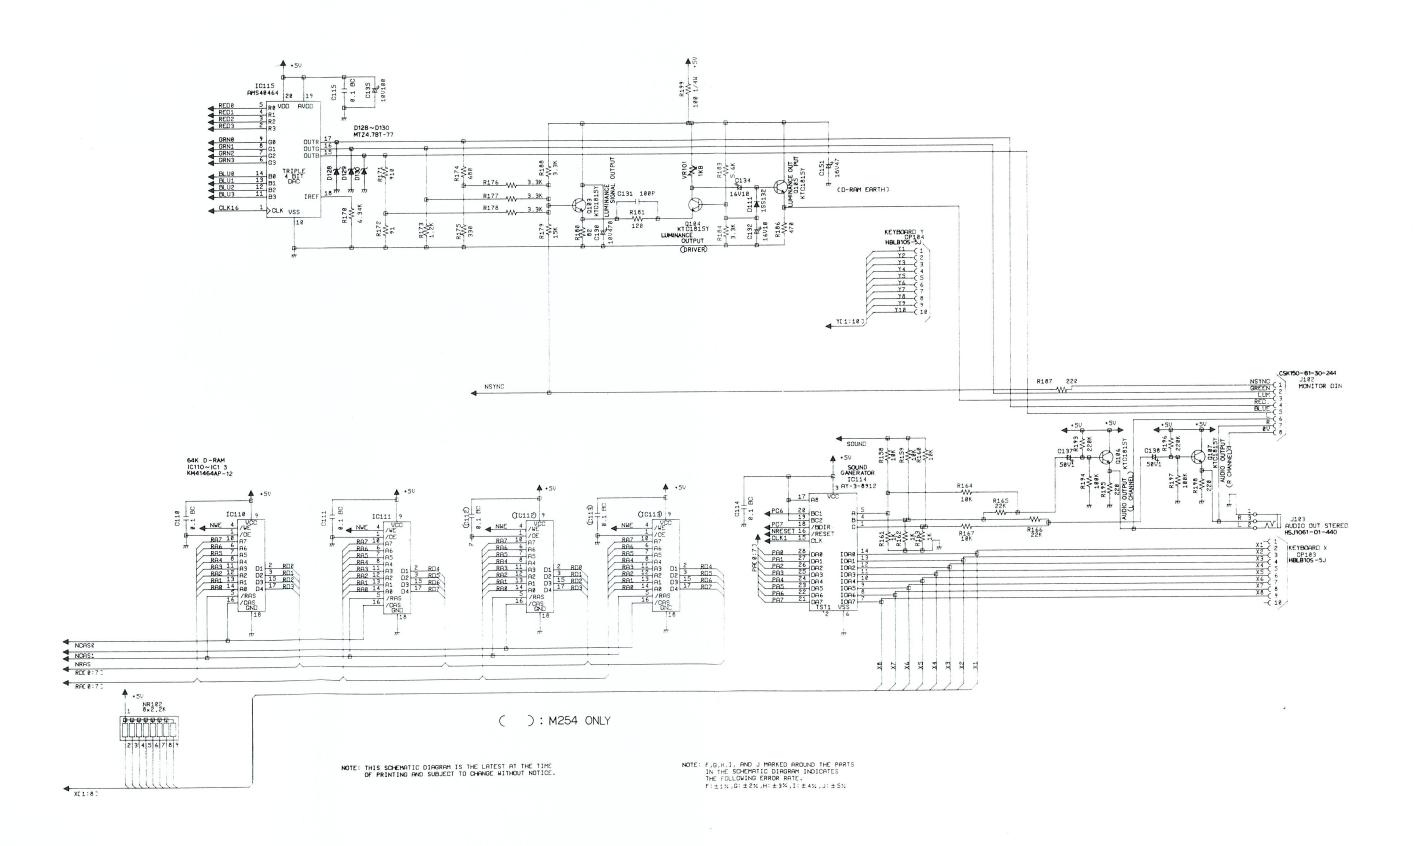

MECHANICAL EXPLODED VIEW

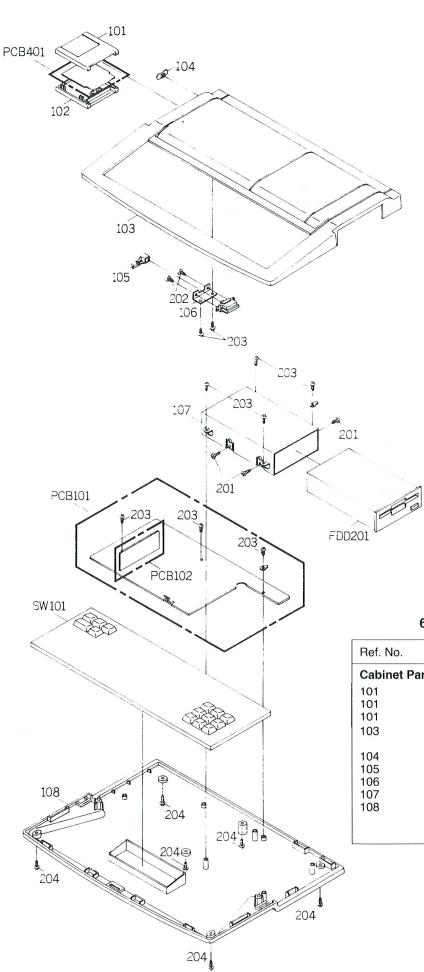

6128 PLUS CABINET PARTS LIST

Ref. No.	Description	Part No.
Cabinet Parts		
101	Cartridge Assy UK	410891
101	Cartridge Assy France	410901
101	Cartridge Assy Spain	410911
103	Cabinet Top ASSY	270773
	Cabinet Top	op-
104	Button Power (A)	271618
105	Button Power (B)	271619
106	Bracket Power Switch	271620
107	Frame FDD	271621
108	Cabinet Bottom Assy	270774
	Leg Rubber	
	Sheet Rating	a cine

6128 PLUS ELECTRICAL PARTS LIST

Ref. No.	Description	Part No.	
IC's			
IC101 IC102 IC103 IC104 IC105, 106 IC107 IC108 IC109 IC110-113 IC114 IC115 IC116	IC AMS40489 IC Z840GAB1N IC SED 9420CAC IC Z765APS IC SN74LS38N IC MC74HC14AN IC MC74HC4051N IC LA6393D IC KM41464AP-12 IC AY-3-8912 IC AMS40464 IC PC74HCT02P	40489 40080 171034 40018 190056 193024 270752 270997 40239 40001 40464 170112	
Transistor			
Q103-107	TR KTC1815 Y-T	170447	
Diodes			
D101 D110, 111, 120-127, 201, 202 D128-130	D LED SLZ-255B021A/BT1 D 1SS132T-77 D MTZ4.7BT-77	170866 171582 175021	
Coils and Induc			
L101 L301	Filter Line ESD-R-12C Coil Choke SN8D-500	270751 271605	
Switches	-	9	
SW101	Switch Keyboard	270779	
SW101	ESU44LN027AA (UK) Switch Keyboard ESU44LN027DA (Spain)	270795	
SW101 SW102	Switch Keyboard ESU44CN027CA (France) Switch Slide ESD-3975	270794 170002	
PCB's	SWIGH Slide EGD 3373	170002	
PCB101 PCB102 PCB103 PCB401	PCB ASSY MC0122 PCB ASSY MS0189 PCB ASSY MS0190 PCB ASSY MC0121		
Miscellaneous			
CFD101	CFD Ansoft 3" EBFCF2SS1AR5	271610	
FDD201 NR101 NR102 PD001 X102	FDD EME-157 Res. Network EXB-F7E681J Res. Network EXB-P88222J Paddle 140Z001-40991 Crystal CXO-824C 40MHz	271611 270862 270800 270792 270772	
Jacks			
J101 J102 J103	Jack Modular 215876-1 Jack DIN CSK150-81-30-244 Jack RCA 3.5 HSJ1061-01-440	271010 271011 130010	
J104 J105	Jack DC HEC0470-01-640 Socket IC DILB40P-8J	271008 176096	
Variable Resisto	ors		
variable nesist		1	

Ref. No.	Description	Part No.		
Resistors: Carb	oon ¹/6W			
1.5 OHM 22 OHM 33 OHM 82 OHM 91 OHM 120 OHM 150 OHM 220 OHM 330 OHM 470 OHM 680 OHM 910 OHM 1.2K OHM 2.2K OHM	R108 R105, 189, 192 R146-157, 168, 169 R180 R172 R181 R113 R187, 195, 198 R175 R186 R174, 182 R171 R161-163, 190 R173 R102, 103, 107, 112, 115, 116, 118-120	152140 152156 152158 152164 152165 152167 152168 152170 152172 152174 152176 250430 152179 152180 152183		
3.3K OHM 4.7K OHM 5.6K OHM 6.8K OHM 10K OHM	R176-178, 184, 188 R101, 127 R183 R111 R114, 117, 128-130, 158-160, 164, 167	152185 152188 152189 152190 152194		
15K OHM 22K OHM 33K OHM 82K OHM 100K OHM 180K OHM 220K OHM 470K OHM 820K OHM	R179 R165, 166, 191 R109 R110 R194, 197 R123-126 R193, 196 R210 R106	152196 152198 152200 152207 152209 152212 152213 152217 152221		
Resistors: Carb	on ¹/₄W			
100 OHM	R199	193588		
Resistors: Meta	II ¹/6W			
1K OHM 2K OHM 6.34K OHM	R132, 134, 136, 138, 140, 142 R131, 133, 135, 137, 139, 141, 143, 144 R170	271025 271026 270785		
Capacitors: Cer				
100PF 50V 330PF 50V 0.1UF 12V	C127, 131 C124, 125 C101, 102, 104, 108, 110, 111-115, 117, 118, 401	24016 193722 175181		
Capacitors: Electrolytic				
1UF 50V 1OUF 16V 47UF 16V 100UF 10V 470UF 10V	C137, 138 C126, 132, 134 C151 C135, 136 C130, 139	157563 157581 157629 193226 270963		
Capacitors: Polyester				
0.001UF 50V 0.01UF 50V 0.047UF 10V	C122 C120, 123, 103 C121	240250 250419 170442		

GX4000 TECHNICAL SPECIFICATION

LSI CHIPS

Z80 processor running at 4MHz. 64K RAM.

128K byte ROM cartridge containing "Burnin' Rubber" game. GI AY-3-8912 3 voice, 8 octave sound generator chip.

Application Specific Integrated Circuit (ASIC) containing 18,000 gates. Includes emulation of 6845 video controller and 8255 parallel peripheral interface. Chip also contains 16,000 bits of storage for sprite data.

ADD-ON ABILITY

1 or 2 digital joysticks or paddles. IBM Standard analogue joystick. (Some cartridge games). Light gun. ROM cartridge up to 512K byte capacity.

DISPLAY SPECIFICATION

16 mode independent sprites are available in 16 different colours from those used to draw the main screen.

Both sprite colours and main screen colours may now be chosen from a palette of 4096. (16 levels of Red, Green and Blue).

Display Mode	Mode 1	Mode 2	Mode 3
No. of colours	4 from 4096	2 from 4096	16 from 4096
No. Sprites	16	16	16
Sprite colours	16 from 4096	16 from 4096	16 from 4096

EXTRA FEATURES

Analogue joystick support.

Soft Scroll allows pixel-wise movement in vertical and horizontal for fast action games.

Split Screen allows two separate areas to be displayed at once alleviating the need to re-draw score bars etc.

DMA driven sound allows tunes to play without processor intervention. Raster Interrupt allows games to change mode and colours at fixed points on the screen.

EXTERNAL SOCKETS

3.5 mm stereo jack plug for connection to external amplifier.
2 × 9 Pin D-type digital paddle/joystick connectors.
15 Pin D-type analogue joystick connector (IBM Standard).
RJ11 "Telephone" jack for connection of light gun.
Phono socket for UHF TV connection — lead supplied.
8 Pin DIN socket for RGB, sync, Luminance and stereo sound connection to monitor.

21 Pin Scart/Peritel socket for direct connection to TV.
6 mm socket for connection of 5V power supply from monitor*.
6 mm socket for connection of AC adaptor (AC adaptor supplied).

DIMENSIONS mm (approx.)

	Width	Height	Depth	
GX4000	250	44	184	

POWER SUPPLY

GX4000 PSU AC adaptor 220V (EURO) 240V (UK) 50 Hz.


ELECTRICAL ADJUSTMENT

FREQUNECY


- 1. Connect the set to a normal TV set with the RF cable.
- 2. Insert the cartridge into the set.
- Adjust the coil in the RF modulator of set so that letters are shown in the picture.


^{*} GX4000 can be connected to MM12 or CM14 monitor and powered from the monitor.

MAIN P.C.B. (Top View)

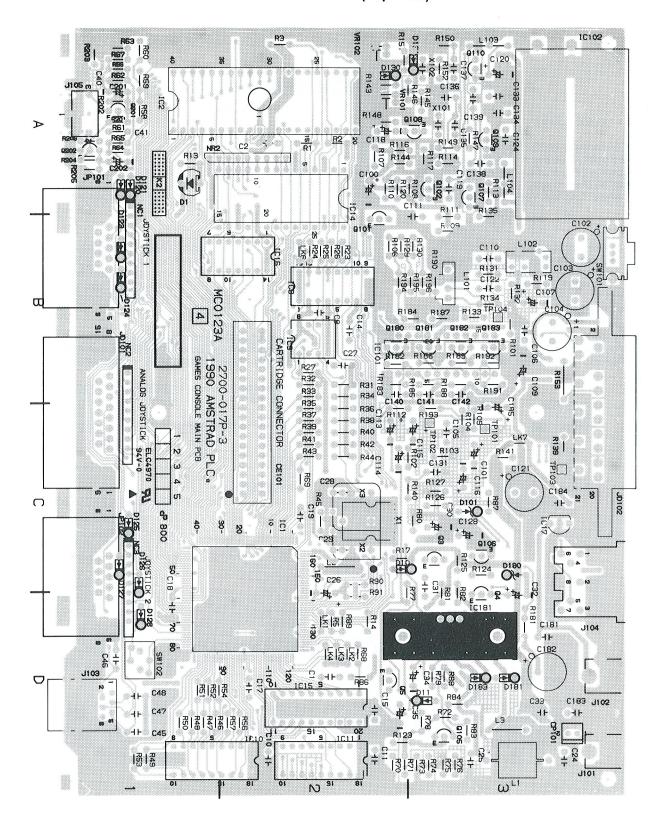



BOTTOM

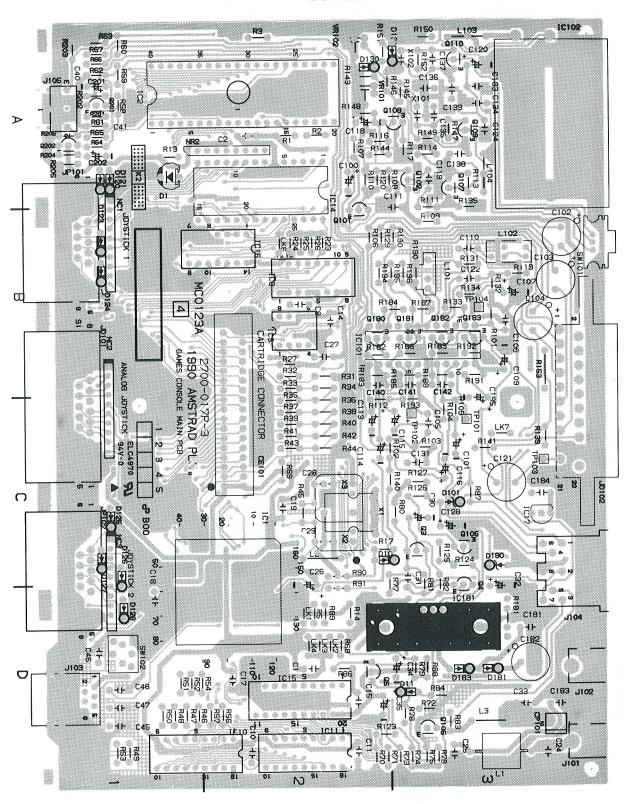

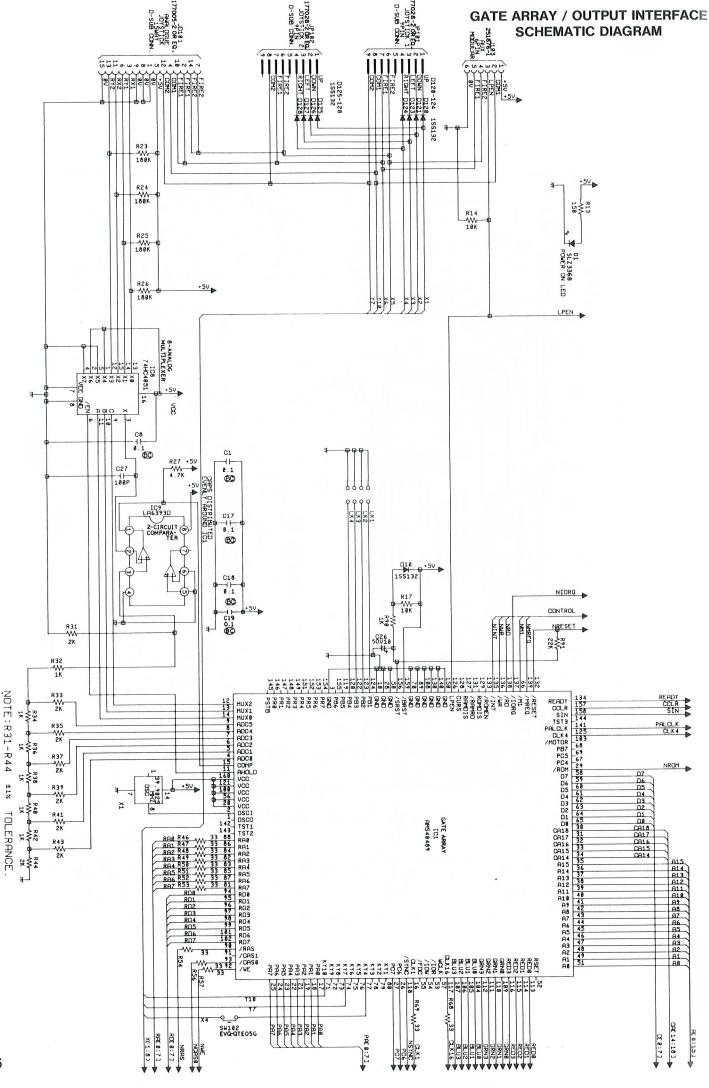


CPU / CONNECTION INTERFACE SCHEMATIC DIAGRAM

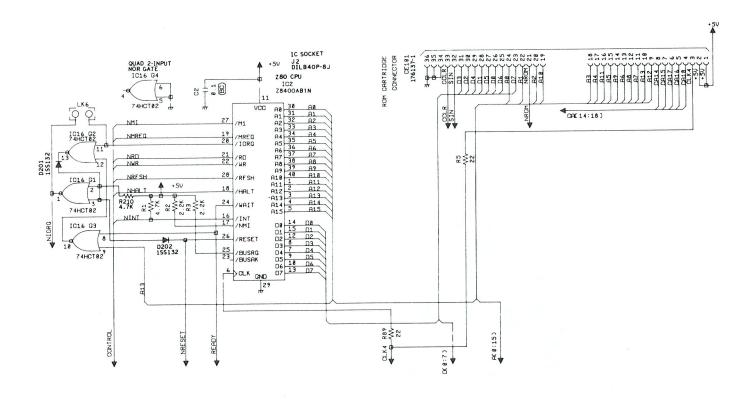


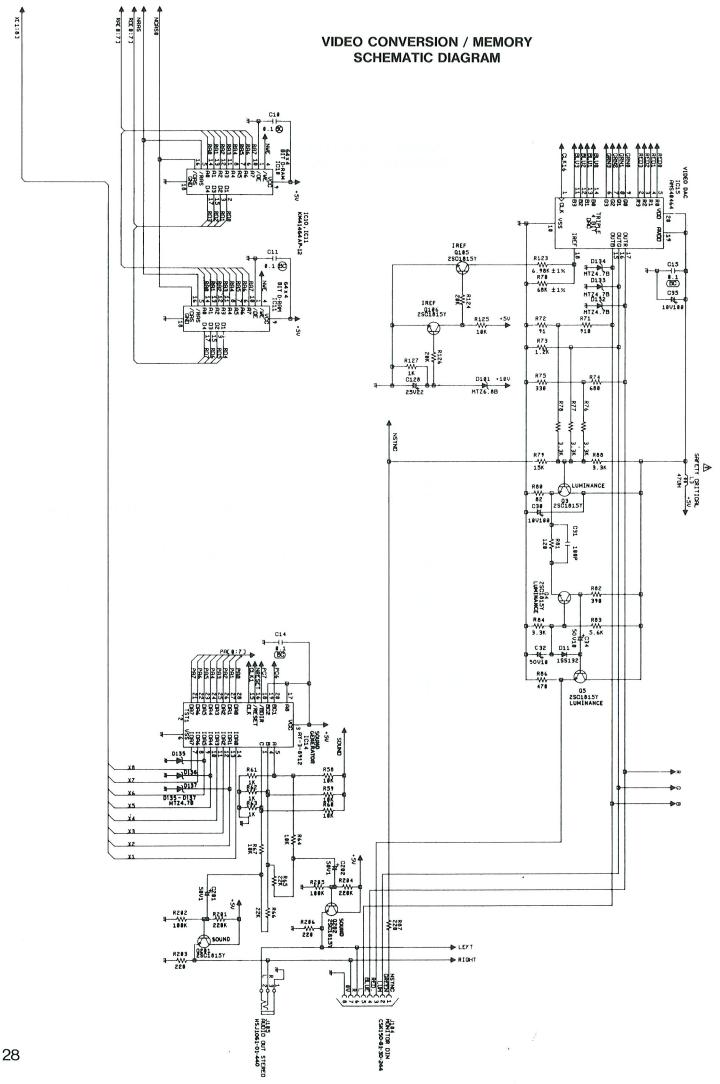


POWER REGULATOR SCHEMATIC DIAGRAM

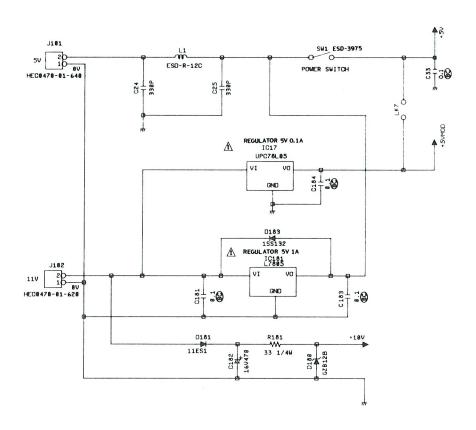

SCHEMATIC DIAGRAM RGB CONVERTER

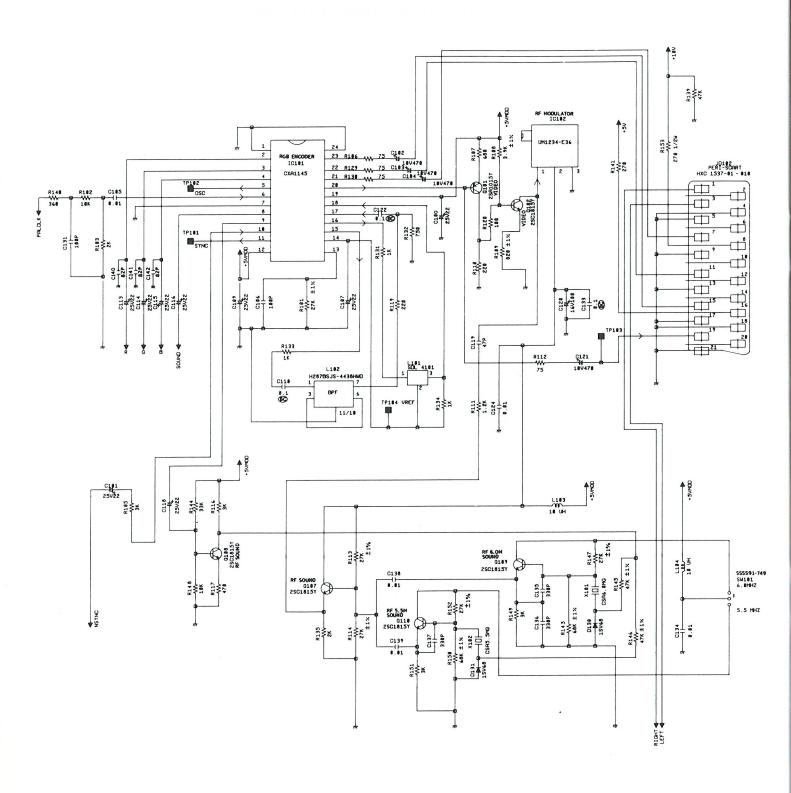


GX4000 CABINET EXPLODED VIEW

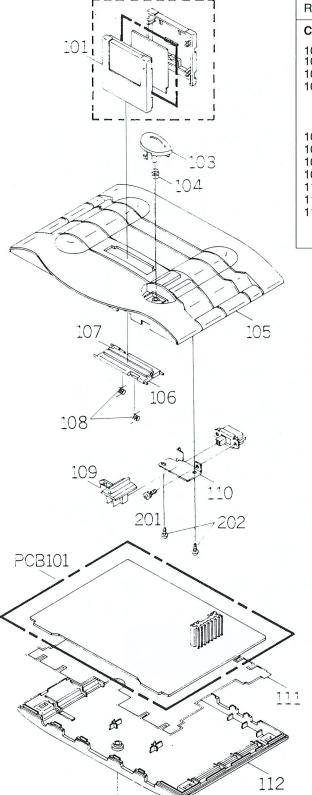


GX4000 CABINET PARTS LIST

Ref. No.	Description	Part No.
Cabinet Parts		
101 103 104 105	Cartridge Case Assy (UK/FR/SP) Knob, Power/Lock Spring Button Top Cabinet Ass'y Cabinet Top Glass LED Plate Brand	41088 270970 271018 270960
106 107 108 109 110 111 112	Flap A Flap B Spring Flap Knob Slide Angle Power Switch Plate Shield Bottom Cabinet Label, Rating Plate Leg Rubber	270969 271000 271019 270966 270968 271020 270964 270972 270965


MAIN P.C.B. FRANCE (Top View)

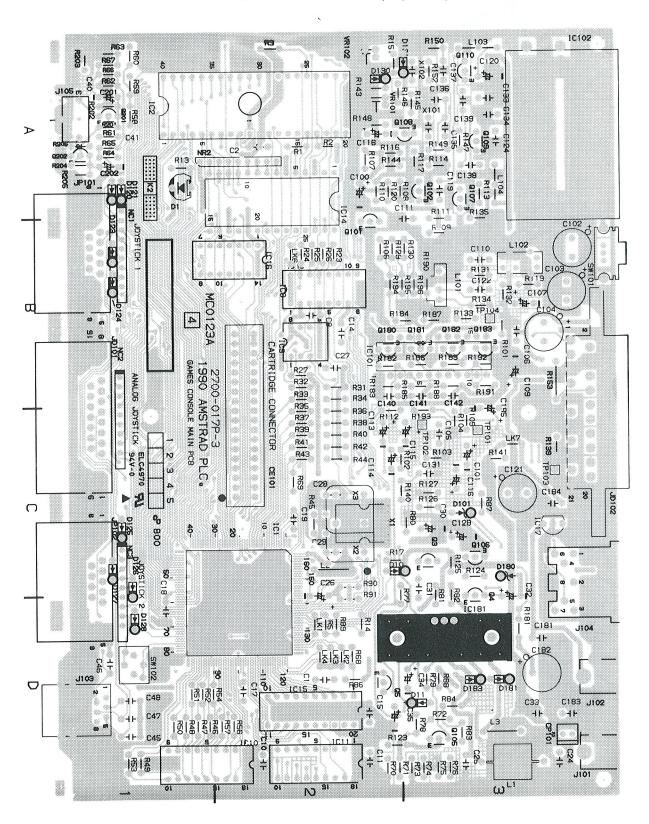


MAIN P.C.B. FRANCE (Bottom View)

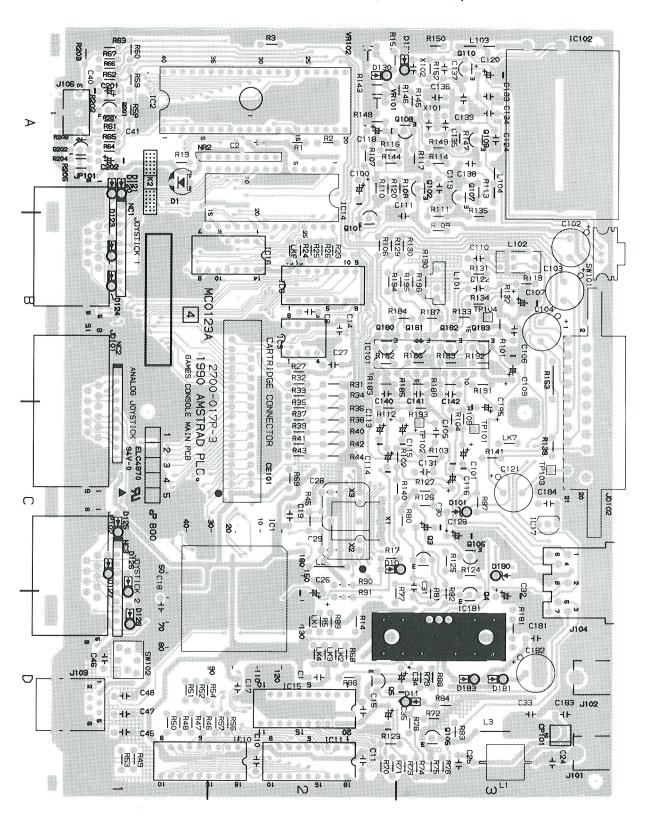

POWER REGULATOR SCHEMATIC DIAGRAM (FRANCE)

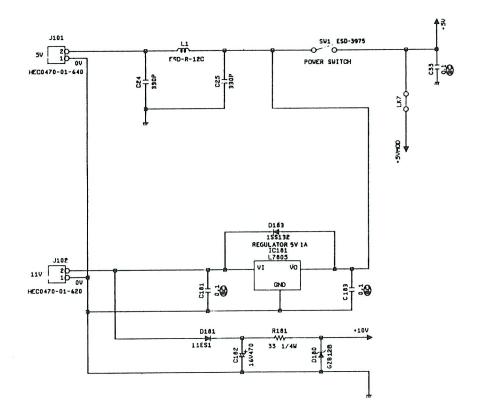

OUTPUT INTERFACE (FRANCE)

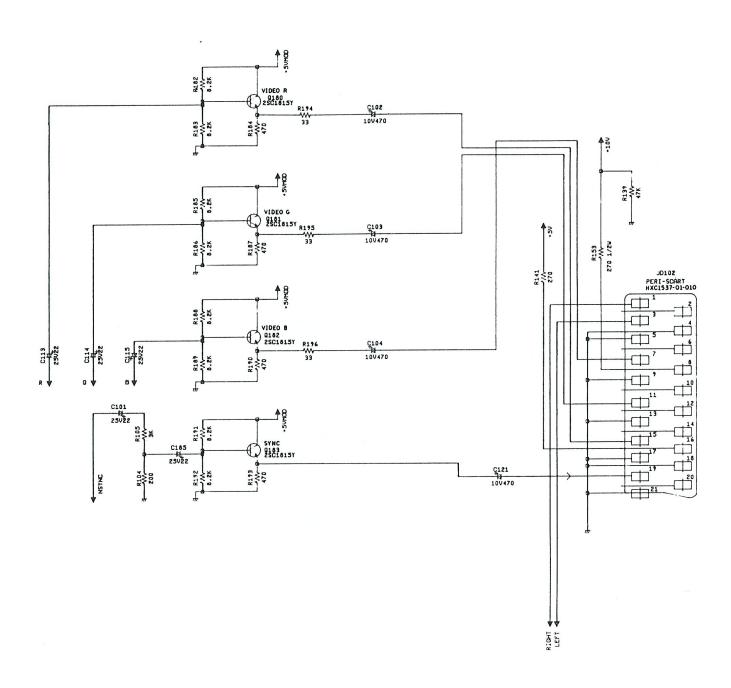

GX4000 ELECTRICAL PARTS LIST

Ref. No.	Description	Part No.
IC's		
IC1 IC2 IC8 IC9 IC10, 11 IC14	IC AMS40489 Gate Array IC Z8400AB1N CPU IC MC74HC4051N ANA Multi IC LA6393D Dual Op Amp IC KM41464AP-12 4064 RAM IC AY-3-8912 Sound	40489 40080 270996 170112 173001 40001
IC15 IC16	Generator IC AMS40464 Video DAC IC PC74HCTO2P Quad Norgate	40464 270999
IC17 IC101 IC102 IC181 IC401	IC UPC78L05 Reg SVOIA IC CXA1145P RGB Encoder IC UM1234E36 RF Modulator IC L7805 Reg SVIA IC AMS40982 Cartridge Gate	190731 270975 271001 271002 40982
IC402	Array IC AMS40908 Cartridge Gate Array	40908
Transistors		
Q3-5, 102, 105-110, 201, 202	TR 2SC1815Y, Silicon	177910
Q101	TR 2SA1015Y Silicon	170453
Diodes		
D1 D10, 11, 120, 121, 123-128, 183, 201, 202	D SLZ336B-16A/B-T1 LED D 1SS132 T	271003 171582
D101 D130, 131 D132-137 D180 D181	D MTZ6.8BT-77 D 1SV68, Variable Cap. D MTZ4.7BT-77 D GZB12B, ZENER D 11ES1TA1, Silicon	171488 271004 175021 271005 271006
Coils		
L1 L3 L101 L102	Filter Line ESD-R-12C Coil Inductor LAL03KH470K Delay Line SDL4101 Filter Band Pass H287BSJS-4438HWD	270751 270992 270993 270994
L103, 104	Coil 10UH	175940
Switches		
SW1 SW101 SW102	Switch Slide ESD-3975 Switch Slide SSSS91-749 Switch Tact EVQ-QTE05G	170002 270990 270991
PCB's		
PCB101 PCB401	PCB ASS'Y MC0123 PCB ASS'Y MC0121	
Miscellaneous	1	
J2 J101 J102 J103 J104 J105	Socket IC DILB40P-8J Jack DC HEC0470-01-640 Jack DC HEC0470-01-620 Jack Modular 215876-1 Jack DIN CSK150-81-30-244 Jack RCA 3.5 HSJ1061-01-440	271007 271008 271009 271010 271011 271012
PD001 X1	Paddle Crystal CX0-824C	270792 271013
X101 X102	39.9025MHZ Ceramic Oscillator CSA6.0MG Ceramic Oscillator CSA5.5MG Manual, Multi-Lingual AC Adapter, UK AC Adapter, Euro Cartridge Assy	271014 271015 U1-GX4000 270974 270973 41088

Ref. No.	Description	Part No.	
Resistors: Carb	on ¹/6W		
22 OHM 33 OHM 75 OHM 82 OHM 91 OHM 100 OHM 120 OHM 220 OHM 270 OHM 330 OHM 360 OHM 390 OHM 470 OHM 680 OHM 750 OHM 910 OHM 1K OHM	R5, 89 R46-54, 56, 57, 68, 69 R106, 112, 129,130 R80 R72 R120 R81 R13 R87, 110, 119, 203, 206 R141 R75 R140 R82 R86, 117 R74, 107 R132 R71 R61-63, 90, 127, 131, 133, 134	152156 152158 152163 152164 152165 152166 152167 152168 152170 152171 152172 271021 152173 152174 152176 152177 240204 152179	
1.2K OHM 2K OHM 2.2K OHM 3K OHM 3.3K OHM 4.7K OHM 5.6K OHM 10K OHM	R73, 111 R103, 135 R2, 2 R105, 116, 149, 151 R76-78, 84, 88 R1, 27, 210 R83 R14, 17, 58-60, 64, 67, 102, 125, 148	151180 271022 152183 271023 152185 193789 152189 152194	
15K OHM 20K OHM 22K OHM 47K OHM 68K OHM 100K OHM 180K OHM 220K OHM	R79 R124, 126 R65, 66, 91 R139 R143 R202, 205 R23-26 R201, 204	152196 157639 152198 152203 152205 152209 152212 157641	
Resistors: Carb	oon ¹/₄ W R181	174852	
Resistors: Meta			
270 OHM	R153	176748	
Resistors: Meta	ıl ¹/6W		
820 OHM 1K OHM 2K OHM 3.9K OHM 6.98K OHM 27K OHM 33K OHM 47K OHM 68K OHM	R109 R32, 34, 36, 38, 40, 42 R31, 33, 35, 37, 39, 41, 43, 44 R108 R123 R101, 113, 114, 147, 152 R144 R145, 146 R70, 143, 150	271024 271025 271026 271027 271028 271029 271030 178036 271031	
Capacitors: Ceramic			
47PF 82PF 50V 100PF 50V 330PF 50V 0.01UF 0.1UF 12V	C119 C140-142 C27, 31, 106, 131 C24, 25, 135-137 C105, 124, 134, 138, 139 C1, 2, 8, 10, 11, 14, 15, 17-19, 33, 110, 122, 133, 181, 183, 184, 401	150515 270035 240221 150518 157577 240223	
Capacitors: Electrolytic			
1UF 50V 10UF 50V 22UF 25V	C201, 202 C26, 32, 34 C100, 101, 107, 109, 113-116, 118, 128	157563 240462 250409	
100UF 10V 470UF 10V 470UF 16V	C30, 35, 120 C102-104, 121 R182	240463 270983 157630	

FLECTRICAL ADJUSTMENTS

MM-12 **SECTION**

1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts.

CAUTION

Use an isolation transformer when performing any service on this chassis.

Before removing the anode cap, discharge electricity because it contains high voltage.

When removing a PCB or related component, after unfastening or changing wire, be sure to put wire back in its original position.

- 1-1: Prepare the following measurement tools for electrical adjustments.
 - Frequency Counter
 DC Voltmeter

2. BASIC ADJUSTMENTS

2-1: DC 12V

- 1. Get the screen of initial pattern on screen from PC.
- Set the bright and contrast controls to maximum position.
- Connect the hot the digital voltmeter to
- Adjust the VR502 so that the digital voltmeter indicates DC 12.00±0.05V.

2-2: DC 5V

1. Put the following loads in the DC cord and set to the following values by using VR501.

LOAD	SETTING VALUE
Load 2.4A	DC 4.80±0.05V
Load 3.6±0.4A	DC OV
No load(OA)	Less than 5.25V

2-3: H-HOLD

- 1. Shut off the input signal and set the screen to the free-run condition.

 Connect a frequency counter to CRT heater.

 Adjust VR407 to obtain 15.625KHz reading.


2-4: SUB BRIGHT

- 1. Set the bright and contrast controls to minimum position.
- 2. Adjust VR402 until letters of initial pattern on screen can be seen slightly.

2-5: V SIZE

- Get the screen of border 26 pattern from PC.
 Set the bright and contrast controls to
- maximum position.


 3. Adjust the VR406 so that the width "A" in border size become 152 ± 2mm. (Refer to Fig. 2-1)

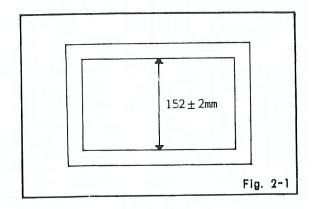


2-6: CENTERING


- 1. Set the bright and contrast controls to maximum position.
- 2. Get the screen of border 26 pattern from PC adjust it by means of the magnet on the back of DY so that it comes to the center of the screen.


MAJOR COMPONENTS LOCATION GUIDE

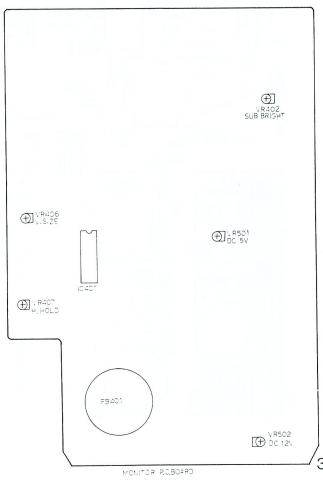

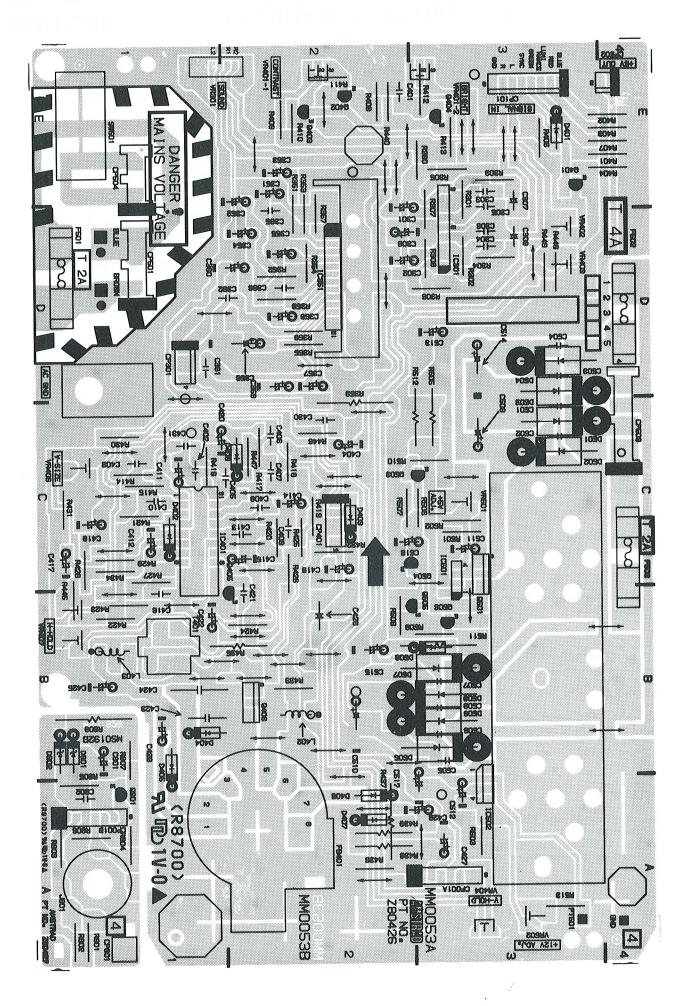

MM12 CABINET PARTS LIST

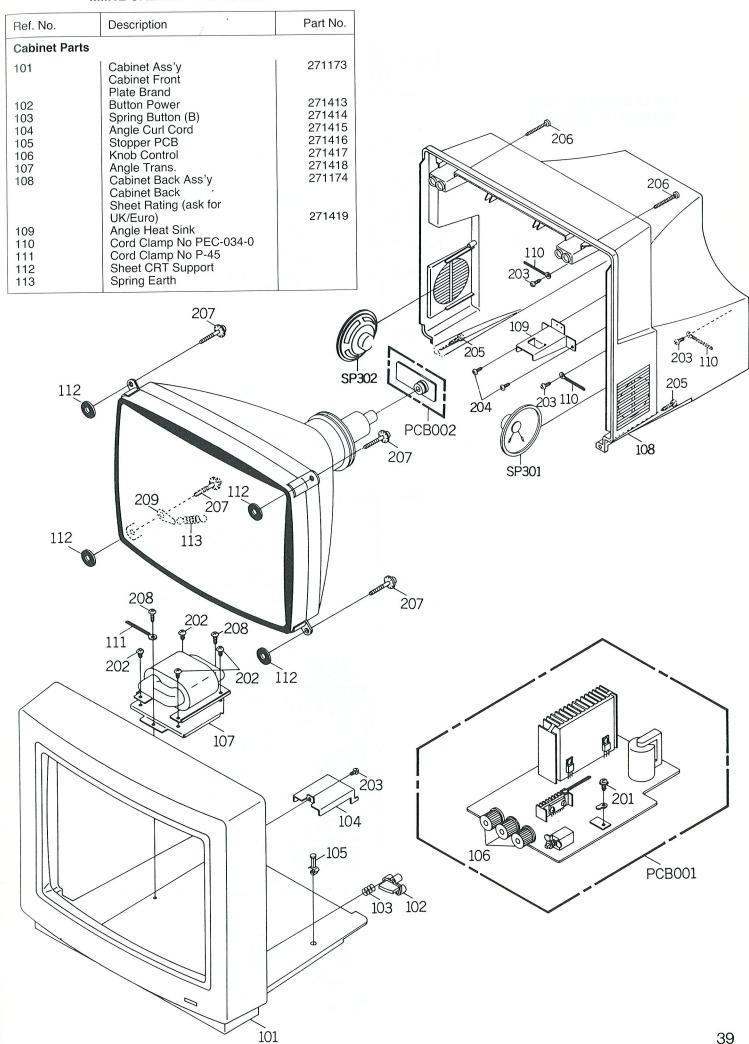

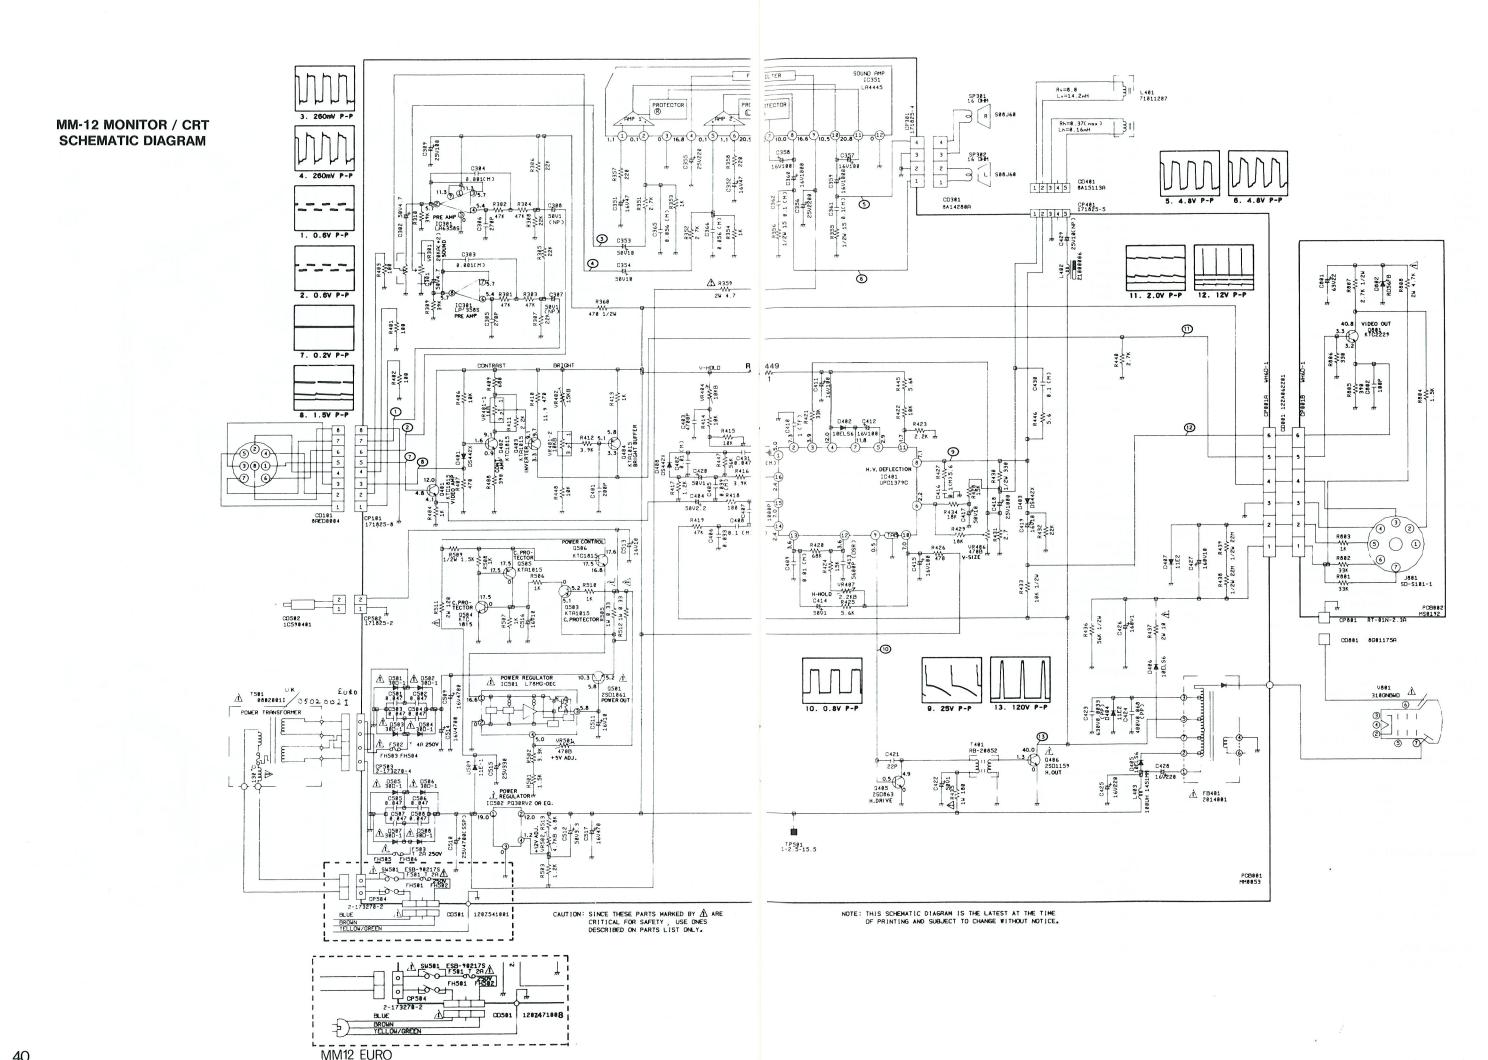

MM12 ELECTRICAL PARTS LIST

Ref. No.	Description	Part No.	1
IC's	Document		1
IC301 IC351 IC401 IC501 IC502	IC LA6358S IC LA4445 IC UPC1379C IC L78MG-OEC IC PQ30RV2	240015 271162 271163 170446 271160	
Transistors			
Q401, 402, 504, 506	TR KTC1815	170447	
Q403, 404, 503, 505	TR KTA1015Y	170453	
Q404 Q406	TR 2SD863E-AE TR 2SD1159	271164 171044	
Q501 Q801	TR 2SD1061 TR KTC2229Y	271410 170624	
Diodes	IN K1022291	170024	
D401, 403,	D DS442X-BT, Silicon	1422117	,
408 D402, 405, 406	D 10ELS6TA1, Rectifier	171550	(
D404, 407 D501-508	D 11E2TA1, Silicon D 30D-1 FC, Rectifier	171049 170625	
D509 D802	D 11E1TA1, Silicon D RD56FB, Zener	171050 170627	
Coils	2 / 15001 5, 201101	., 5027	1
L401	DY 71011207	271408	
L402 L403	Coil Linearity 21000006 Coil Inductor 100UH	171558 175867	
Switches			1
SW501	Switch Push ESB-90217S	171511	
PCB's			
PCB001 PCB002	PCB ASS'Y MM0053-S PCB ASS'Y MS0192		
Miscellaneous			
T401 T501	Trans. Horiz. Drive RG-20852 Trans. Power	271171 271170/S	
T501	AC 0408020011 (UK) Trans. Power	271425	
J801	AC 05020021 (Euro) Socket CRT SD-S101-1	271427	
CV501	Cover AC Cord Fuse Bet 2A (T) 250V	271428 193357	
F501, 503 F502	Fuse Bet 4A (T) 250V	152603	
FB401 FH501, 503,	Transformer Flyback 2014001 Holder Fuse HO451	177054 271429	
505 FH502, 504,	Holder Fuse HO452	271430	
506 S501	Spacer Bush-M	176849	
SP301, 302 V801	Speaker SO8J60 Tube Cathode Ray	271169 271168	
CD101	310GNBWD Cord DIN (7 Pin)	271176	
CD502	Cord DC 6.5mm	271177	
Variable Resiste	To the second	074 400	
VR301 VR401	VROT EVJ-COOF25A24 VROT EVU-G2AFA0007	271403 271404	
VR402 VR404	VRSF RHO632CE4R01 VROT RK09K1110APPA	271405 271406	
VR406, 407, 501, 502	VRSF RH0638CS2R02A	271407	
Resistors: Meta	I Oxide		
0.33 OHM 1W 4.7 OHM 2W	R505, 512 R359	271444 271445	
10 OHM 2W	R437	271446 240216	
120 OHM 2W 180 OHM 1W	R511 R435	271447	
4.7K OHM 2W	R808	271448	-
Resistors: Solid 22M OHM 1/2W		271449	
221VI OI 11VI 72VV	11700, 400	211773	1

		5
Ref. No.	Description	Part No.
Resistors: Carb		1420145
	R309, 310	1420143
Resistors: Carb 2.7 OHM 5.6 OHM 100 OHM 220 OHM 330 OHM 470 OHM 680 OHM 1K OHM	R431 R427, 446 R401-403, 418 R357, 358 R806 R408, 805 R407, 410, 426 R409 R353, 354, 404, 413, 449,	271435 271436 240507 193599 193591 271437 193592 240509 193594
1,2K OHM 1.5K OHM 2.2K OHM 2.7K OHM 3.3K OHM 3.9K OHM 5.6K OHM 10K OHM 15K OHM 15K OHM 12K OHM 22K OHM 33K OHM 47K OHM 56K OHM	506-508, 510, 803 R417, 503 R501, 804 R411, 423 R351, 352, 440 R502 R412, 416 R425, 445 R513 R406, 414, 415, 422, 448 R424, 428 R429, 434 R305-308, 432 R421, 801, 802 R301-304, 419 R447	271438 271439 193595 193596 193597 271440 10079 193598 240511 271442 193700 193701 10097 240512 10103 271443
Resistors: Carb	on ½W	
15 OHM 330 OHM 470 OHM 1.5K OHM 2.7K OHM 10K OHM 56K OHM	R355, 356 R430 R360 R509 R807 R433 R436	271432 174834 201711 250047 176749 271433 271434
Capacitors: Cer	amic	
10PF 22PF 50V 200PF 270PF 50V 1000PF 50V 0.0047UF 50V 0.033UF 50V 0.047UF 50V	C802 C421 C401 C305, 306 C407 C403 C406 C501-508	193416 193719 172179 157677 240222 201719 153922 152645
Capacitors: Met	al Plastic	
1UF 50V	C410	271455
Capacitors: Plan 0.0056UF	stic C413	174818
Capacitors: Pol	ypropylene	1-1
0.0033UF 630V 0.068UF 400V	C423 C424	157740 170620
Capacitors: Ele		
1UF 50V 1UF 160V 2.2UF 50V 3.3UF 50V 4.7UF 50V 10UF 16V 10UF 50V 10UF 160V 22UF 63V 47UF 16V 100UF 16V 100UF 25V 220UF 16V 220UF 25V 330UF 25V 470UF 16V 1000UF 16V 1000UF 15V 220UF 25V 470UF 16V	C307, 308, 414, 420, 422 C426 C404 C512 C301, 302 C419, 511, 513, 516 C429 C353, 354, 417 C427 C801 C351, 352 C357, 358, 411, 412, 415 C309 C425, 428 C355 C515 C517 C359, 360 C418 C356 C509, 514	157563 271450 157672 271451 157565 157581 271452 240462 170608 170609 172074 157568 157569 240464 152565 170836 157630 271453
4700UF 25V	C510	240241

CM-14 SECTION

CM 14 COLOUR MONITOR

ELECTRICAL ADJUSTMENTS

1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts.

Use an isolation transformer when performing any service on this chassis.

Before removing the anode cap, discharge electricity because it contains high voltage.

When removing a PCB or related component, after unfastening or changing wire, be sure to put wire back in its original position.

1-1: Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope 2. Frequency Counter

3. White Balance Signal Generator 4. White Balance Checker

5. DC Voltmeter

2. BASIC ADJUSTMENTS

2-1: +5V

Load 2.4A into DC out.
 Connect the DC voltmeter to DC out.

3. Adjust VR501 until voltage is 4.8±0.03V.

4. After adjustments, verify if the voltage is less than 5.25V in no-load mode.

2-2: H-HOLD

1. Shut off the input signal and set the screen to the free-run condition.

2. Connect a frequency counter to CRT heater.

3. Adjust VR403 to obtain 15.625KHz reading.

2-3: CUT OFF

1. Shut off the input signal and set the screen to the free-run condition.

Set the bright control to maximum position.


3. Set VR801, VR803, VR804 and VR805 to center positions.
4. Connect the oscilloscope to collector of

Q802.

5. Adjust VR402 to obtain 125V as shown in Fig. 2-1.

6. Then, short the first pin and the second pin in CP402.

7. Keeping the condition, adjust the horizontal line on the picture to a extent of lighting faintly.

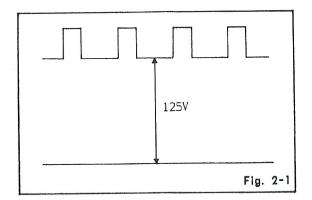


2-4: SUB BRIGHT

1. Shut off the input signal and set the screen to the free-run condition.

2. Set the bright control to maximum position

3. Connect the oscilloscope to collector of 0802

4. Adjust VR402 to obtain 123 ~ 124V as show in Fig. 2-2.

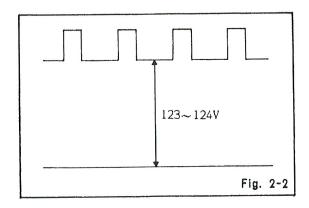

2-5: WHITE BALANCE

1. Input 75% white and 25% white patterns to the monitor with the white balance signal


generator.
2. Set the SW1 of the white balance signal generator to auto position. Adjust high control of the white balance signal generator until green of the white balance checker is centered for 75% white. Adjust low control until green is centered for 25% white.

3. Adjust VR802 and VR805 until blue of white balance checker is centered. Adjust VR801 and VR803 until red of white balance checker is also centered.

2-6: V. SIZE

1. Set the bright control to maximum position

 Receive the monocrome pattern.
 Adjust VR406 to AB = CD as shown in Fig. 2-3.

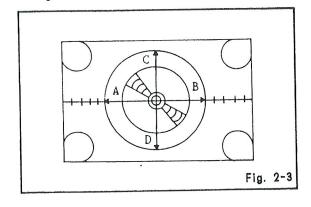

2-7: FOCUS

Set the bright control to maximum position.

2. Adjust the picture by using focus volume.

3. PURITY AND CONVERGENCE ADJUSTMENT

NOTE

Turn the unit on and let it warm up for at least 30 minutes before performing the

following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.

Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

 Tighten the screw for the magnet. Refer to the adjusted CRT for the position. (Refer to Fig. 3-1) If the deflection yoke and magnet are in one body, untighten the screw for the body.

2. Receive the green raster pattern from

- color bar generator.

 3. Slide the deflection yoke until it touches the funnel side of the CRT.
- 4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.

5. Switch the color bar generator from the green raster pattern to the crosshatch

- pattern.
 6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole
- 7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
- 8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

Adjust after performing adjustments in section 3-1.

- 1. Receive the green raster pattern from color bar generator.
- 2. Adjust the pair of purity magnets to center the color on the screen. Adjust the pair of purity magnets so the
- color at ends are equally wide.

 3. Move the deflection yoke backward (To neck side) slowly, and stop it at the position when the whole screen is green.
- 4. Confirm red and blue colors
- 5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

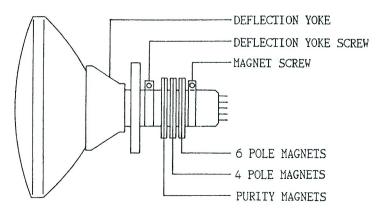


Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

- 1. Receive the crosshatch pattern from color bar generator.
- 2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.

Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/cownward and right/left. (Refer to Fig. 3-2-a)

Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. (Refer to Fig. 3-2-b)


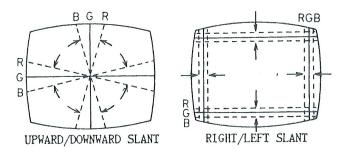



Fig. 3-2-a

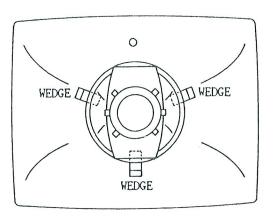


WEDGE POSITION

Fig. 3-2-b

MAJOR COMPONENTS LOCATION GUIDE

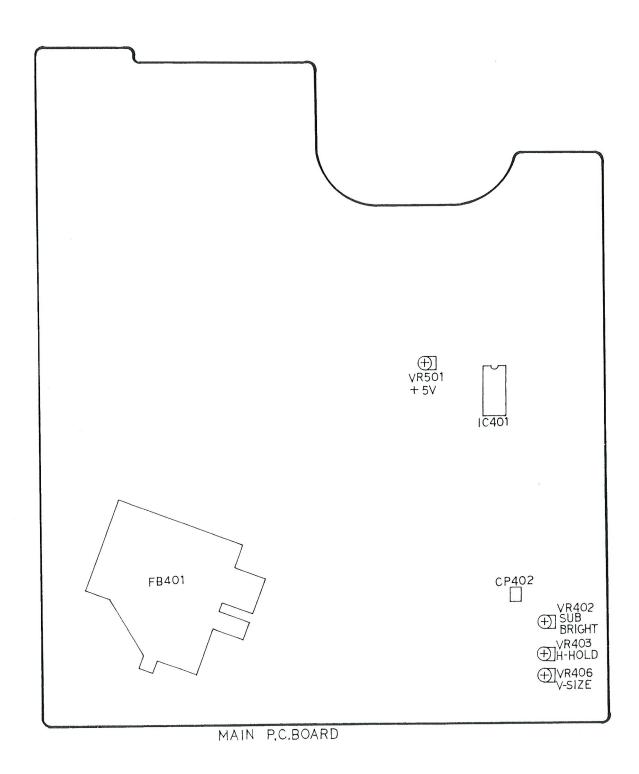

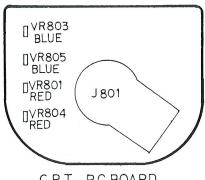

CRT P.C.BOARD


CM14 ELECTRICAL PARTS LIST


	•	JIVI 14 ELECTI
Ref. No.	Description	Part No.
IC's	1	
IC301 IC351 IC401 IC402 IC501 IC502	IC LA635S IC LA4445 IC LA7800 IC LA7830 IC STK73410 IC L78 MG-OEC	240015 271162 1400106 170444 271151 170446
Transistors		
Q401, 402, 506	TR 2SC1815Y, Silicon	170447
Q403 Q404 Q405 Q502 Q503, 505 Q504 Q801-803	TR 2SA950Y, Silicon TR 2SC2271-AE, Silicon TR 2SD1877, Silicon TR SD1667, Silicon TR 2SA1015Y, Silicon TR 2SC2120Y, Silicon TR 2SC3417, Silicon	170448 1409202 271152 177045 170453 170113 271181
Diodes		
D101-103 D104-106 D401, 410 D402 D405, 406,	D GZA6.2 Y BT Zener D GZA6.8 Y BT Zener D 1S2472T-77, Silicon D GZA11 Y BT Zener D 10ELS6TA1 Rectifier	171552 175636 170455 810339 171550
D407, 505 D411 D501-504 D506, 507 D508, 509 D510	D DFD05TG-BT Rectifier D 11E1TA1 Silicon D 20E10FA13 Silicon D 15DF6-FC Silicon D 30DF2-FC Silicon D R2M-LFB3 Avalanche	171490 171050 176039 271180 171555 1400122
Coils		
L401 L501 L502 L801	Coil Linearity Coil Line Filter AC Coil Degauss Coil 100UH	271186 171502 271187 175867
Switches		
SW501	Switch Push ESB-90217S	171511
PCB's		
PCB001 PCB002	PCB ASS'Y MM0052-C PCB ASS'Y MS0191	
Miscellaneous		
T401 T501 J801 F501 FB401 FH502 ICP401 ICP501 ICP502 ICP503 SP301, 302	Trans. Horiz. Drive 305Y001 Trans. Switching 8139012 Socket CRT HPS1171-01-050 Fuse Bet 2A(T) 250V Trans. Flyback 3714016 Holder Fuse H0451 Holder Fuse H0452 IC Protector ICP-N50 IC Protector ICP-N20T104 IC Protector ICP-N38T104 IC Protector ICP-N75T104 Speaker S08J60	171506 271188 171514 193357 271189 271429 271430 171547 150442 271157 171057 271169 171533
TH501 V001 CD101	Degauss Element ERP-F5B0M180K CRT 370KRB22-TC21 (SPYB) Cord DIN (7 pin)	271190 271176

AL PARTS LIST			
Ref. No.	Description	Part No.	
Variable Resist	tors		
VR301 VR401 VR402, 403, 407	VROT EVJ-C00F25A24 VROT EVU-E2AF25B52 VRSF EVNDXAA02B03	271403 271182 271183	
VR405 VR406, 501 VR801 VR802 VR803 VR804 VR805	VROT RK09K1110APQA VRSF EVNDXAA02B13 VRSF 5K OHM Red VRSF 5K OHM Green VRSF 5K OHM Blue VRSF 500 OHM Red VRSF 500 OHM Blue	271184 271185 171696 171697 171698 171699 171700	
Resistors: Carl	oon ¹/6W		
39К ОНМ	R309, 310	152201	
Resistors: Carl	oon ¹/₄W		
100 OHM 180 OHM 220 OHM 270 OHM 330 OHM 1K OHM	R101-103, 810 R415, 807 R357, 358, 407, 416 R811, 814 R401, 404 R353, 354, 411, 423, 432, 453, 504, 512, 514-517, 815, 816	240507 193588 193589 193590 193591 193594	
1.5K OHM 1.8K OHM 2.2K OHM 2.7K OHM 3.3K OHM 8.2K OHM 10K OHM 12K OHM 15K OHM 22K OHM 27K OHM	R420, 421, 441 R402, 403, 442, 462 R410 R104-106, 351, 352, 817 R406 R418, 419 R428, 429 R409, 424 R431 R305-308, 414 R425	271439 271202 193595 193596 193597 271203 240511 10087 271442 193701 193702	
33K OHM 47K OHM 56K OHM 82K OHM 120K OHM 150K OHM 180K OHM 220K OHM	R440 R301-304, 412 R417 R439, 463 R430 R451 R408 R413	10097 240512 10103 271204 271205 271206 271207 193706	
Resistors: Carb	oon ¹/₂W		
1.5 OHM 15 OHM 220 OHM 470 OHM 1K OHM 2.2K OHM 2.7K OHM 4.7K OHM 120K OHM 270K OHM	R449 R355, 356 R433 R445 R513 R446, 460 R802-804 R426 R502 R503 R801	271208 271432 271209 201711 240214 271210 176749 176750 271211 271212 271213	
Resistors: Cem			
5.6 OHM 5W 15 OHM 7W	R501 R436	271214 170417	
Resistors: Fuseable			
3.3 OHM ¹ / ₂ W 8.2 OHM ¹ / ₄ W	R438 R444	170138 271215	
Resistors: Meta	l Oxide		
0.33 OHM 1W 2.2 OHM 3W 3.9 OHM 2W 15 OHM 2W 22 OHM 2W 22 OHM 3W 33 OHM 3W 82 OHM 2W 1K OHM 1W 3.9K OHM 2W	R510, 511 R508 R518 R509 R433 R505 R506, 507 R519 R452 R427	271444 271216 271217 271218 271249 271219 271220 271221 271222 271223	
15K OHM 2W	R805, 808, 812	271224	


CM14 ELECTRICAL PARTS LIST

Ref. No. Description	CM14 ELECTRICAL PARTS LIST			
Capacitors: Plastic	Ref. No.	Description	Part No.	
220PF 500V	22PF	C416		
240PF	220PF	C806	157575	
270PF 500V C433 271239 230PF 500V C803 240233 240233 2470PF 2KV C510 176751 560PF 500V C417 C417 C271240 806223 1000PF 2KV C801 271241 1000PF 500V C512, 513 271242 2200PF 2KV C432 271243 2200PF 2KV C502-504 174812 2200PF 125V C506 271244 1000PT 500V C511 271245 2709PT 125V C506 271244 2200PF 125V C509 271246 2709PT 125V C509 271246 271247 2709PT 125V C509 271246 271247 2709PT 125V C509 271246 271247 2709PT 125V C509 271248 271247 2709PT 125V C411 271234 271231 271234 271231 271234 271231 271234 271231 271231 271231 271231 271231 271234 271231 271232 271232 271233 271232 271232 271233 271232 271232 271233 271232 271232 271232 271232 271232 271232 271232 271232 271231	240PF	C804, 807, 808	271238	
ATOPF 2KV C510	270PF 500V	C433		
680PF C802 806223 1000PF 2KV C801 271241 1000PF 500V C512, 513 271242 1500PF 2KV C432 271243 2200PF 2KV C502-504 174812 2200PF 125V C506 271244 0.0015UF 2KV C511 271245 0.0022UF 2KV C509 271246 Capacitors: Plastic C.0.056UF C415 174818 Capacitors: Metal Polypropylene C.0.0082UF C431 271247 1600V 0.1UF AC250V C501 171609 271248 Capacitors: Tantalum 1UF 16V C426 271235 Capacitors: Polyester C.0.01UF 50V C429 271235 Capacitors: Polyester C.0.01UF 50V C421 271231 C.0.01UF 50V C421 C425 C.0.0047UF 50V C409 C409 C.0.0047UF 50V C409 C.0.0047UF 50V C409 C.0.0047UF 50V C409 C.0.0047UF 50V C406, 446 C.0.560F 50V C.0.056UF 50V C.0.040, 446 C.0.560F 50V C.0.056UF 50V C.0.040, 446 C.0.560F 50V C.0.040, 446 C.0.560F 50V C.0.056UF 50V				
1000PF 2KV				
1500PF 2KV C432 271243 2200PF 2KV C506 174812 2200PF 125V C506 271244 0.0015UF 2KV C511 271245 271246 0.0022UF 2KV C509 271246 0.0022UF 2KV C509 271246 0.0022UF 2KV C509 271246 0.0025UF 2KV C509 271246 0.0056UF C415 174818 0.0056UF C415 174818 0.0082UF C431 271247 0.0082UF C431 271247 0.0082UF C429 271248 0.014F AC250V C501 171609 271248 0.014F AC250V C429 271235 0.014F AC250V C426 271235 0.0014F 50V C426 271235 0.0015UF 50V C426 271230 0.0015UF 50V C421 271231 0.014F 50V C421 271231 0.014F 50V C409 152389 0.039UF 50V C404 4177154 0.047UF 50V C406, 446 251526 0.056UF 50V C422 271233 0.14F 50V C361, 362 250066 157546 0.056UF 50V C422 271233 0.047UF 50V C361, 362 250066 0.15UF 100V C361, 362 250066 0.15UF 100V C422 271233 0.0047UF 50V C301, 302, 407, 420 157563 1047565 104756V C357, 358 157565 104756V C309 157568 104756V C309 157568 100456V C309 157568 100456V C309 157568 100456V C309 157568 100456V C410 C425 C309 157568 100456V C410 C425 C309 157568 100456V C410 C425 C309 157568 100456V C357, 358 100456V C355, 360 271453 100000000000000000000000000000000000	1000PF 2KV	C801	271241	
2200FF 125V	1500PF 2KV	C432	271243	
Capacitors: Plastic	2200PF 125V	C506	271244	
Capacitors: Metal Polypropylene				
Capacitors: Metal Polypropylene 0.0082UF C431 271247 1600V 0.1UF AC250V C501 171609 0.82UF 200V C429 271248 Capacitors: Tantalum 1UF 16V C411 271234 2.2UF 16V C426 271235 Capacitors: Polyester 0.001UF 50V C303, 304, 401 240250 0.0015UF 50V C408 271230 0.0015UF 50V C408 271230 0.0047UF 50V C421 271231 0.015UF 50V C409 152389 0.0399UF 50V C409 152389 0.0399UF 50V C404 177154 0.056UF 50V C365, 366 157546 0.056UF 50V C365, 366 157546 0.068UF 50V C410, 428 271232 0.1UF 50V C361, 362 250066 0.15UF 100V C422 271233 Capacitors: Electrolytic 1UF 50V C370, 308, 414, 508 157563				
0.0082UF			174818	
1600V			271247	
Capacitors: Tantalum 1UF 16V C411 271234 2.2UF 16V C426 271235 Capacitors: Polyester 0.001UF 50V C303, 304, 401 240250 0.0047UF 50V C408 271230 0.0047UF 50V C421 271231 0.01UF 50V C413, 427 250419 0.015UF 50V C409 152389 0.039UF 50V C404 177154 0.056UF 50V C406, 446 251526 0.056UF 50V C365, 366 157546 0.068UF 50V C361, 362 250066 0.15UF 100V C422 271232 Capacitors: Electrolytic 1UF 50V C307, 308, 414, 508 157563 1UF 160V C419, 445 271225 2.2UF 50V C440, 444 15762 4.7UF 50V C301, 302, 407, 420 157565 10UF 16V C519 157581 10UF 50V C353, 354 240462 10UF 50V C353, 354 240462	1600V			
1UF 16V C411 271234 2.2UF 16V C426 271235 Capacitors: Polyester 0.001UF 50V C303, 304, 401 240250 0.0015UF 50V C408 271230 0.0047UF 50V C421 271231 0.01UF 50V C413, 427 250419 0.015UF 50V C409 152389 0.039UF 50V C404 177154 0.056UF 50V C365, 366 157546 0.056UF 50V C365, 366 157546 0.068UF 50V C410, 428 271232 0.1UF 50V C361, 362 250066 0.15UF 100V C422 271233 Capacitors: Electrolytic 1UF 50V C307, 308, 414, 508 157563 1UF 160V C419, 445 271225 2.2UF 50V C440, 444 157672 4.7UF 50V C301, 302, 407, 420 157563 10UF 16V C517 271452 10UF 16V C517 271452 10UF 100V C507	0.82UF 200V	C429		
Capacitors: Polyester C303, 304, 401 240250 0.001UF 50V C408 271230 0.0047UF 50V C408 271230 0.0047UF 50V C421 271231 0.01UF 50V C413, 427 250419 0.015UF 50V C409 152389 0.039UF 50V C404 177154 0.056UF 50V C365, 366 157546 0.056UF 50V C365, 366 157546 0.068UF 50V C361, 362 250066 0.15UF 100V C422 271233 Capacitors: Electrolytic 1UF 50V C307, 308, 414, 508 157563 1UF 160V C419, 445 271225 2.2UF 50V C440, 444 157672 4.7UF 50V C301, 302, 407, 420 157563 10UF 16V C519 157581 10UF 25V C517 271452 10UF 10V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100U			074004	
0.001UF 50V C303, 304, 401 240250 0.0015UF 50V C408 271230 0.0047UF 50V C421 271231 0.01UF 50V C409 152389 0.039UF 50V C404 177154 0.047UF 50V C406, 446 251526 0.056UF 50V C365, 366 157546 0.056UF 50V C365, 366 157546 0.068UF 50V C410, 428 271232 0.1UF 50V C361, 362 250066 0.15UF 100V C422 271233 Capacitors: Electrolytic 1UF 50V C307, 308, 414, 508 157563 1UF 160V C419, 445 271225 2.2UF 50V C440, 444 157672 4.7UF 50V C301, 302, 407, 420 157565 10UF 16V C519 157581 10UF 50V C353, 354 240462 10UF 50V C353, 354 240462 10UF 16V C351, 352, 418 172074 10UF 16V C351, 352, 418 172074				
0.0015UF 50V C408 271230 0.0047UF 50V C421 271231 0.01UF 50V C413, 427 250419 0.015UF 50V C409 152389 0.039UF 50V C404 177154 0.047UF 50V C406, 446 251526 0.056UF 50V C365, 366 157546 0.068UF 50V C361, 362 250066 0.15UF 100V C322 271232 Capacitors: Electrolytic 1UF 50V C307, 308, 414, 508 157563 1UF 160V C419, 445 271225 2.2UF 50V C440, 444 157672 4.7UF 50V C301, 302, 407, 420 157565 10UF 16V C519 157581 10UF 25V C517 271452 10UF 50V C353, 354 240462 10UF 100V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 25V C309 157569 150UF 400V C505 157570 150UF 400V C505 1575	Capacitors: Pol	yester		
0.0047UF 50V C421 271231 0.01UF 50V C409 152389 0.039UF 50V C404 177154 0.047UF 50V C406, 446 251526 0.056UF 50V C365, 366 157546 0.068UF 50V C410, 428 271232 0.1UF 50V C361, 362 250066 0.15UF 100V C422 271233 Capacitors: Electrolytic 1UF 50V C307, 308, 414, 508 157563 1UF 160V C419, 445 271225 2.2UF 50V C301, 302, 407, 420 157665 10UF 16V C519 157581 10UF 25V C517 271452 10UF 50V C353, 354 240462 10UF 100V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 16V C357, 358 157568 100UF 25V C309 157569 150UF 400V C505 157570 150UF 400V <td< td=""><td></td><td></td><td></td></td<>				
0.015UF 50V C409 152389 0.039UF 50V C404 177154 0.047UF 50V C406, 446 251526 0.056UF 50V C365, 366 157546 0.068UF 50V C410, 428 271232 0.1UF 50V C361, 362 250066 0.15UF 100V C422 271233 Capacitors: Electrolytic 1UF 50V C307, 308, 414, 508 157563 1UF 160V C419, 445 271225 2.2UF 50V C440, 444 157672 4.7UF 50V C301, 302, 407, 420 157565 10UF 16V C519 157581 10UF 25V C517 271452 10UF 50V C353, 354 240462 10UF 100V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 16V C357, 358 157568 100UF 35V C425 157570 150UF 400V C505 157792 220UF 160V		1 - 1 - 1	271231	
0.047UF 50V C406, 446 251526 0.056UF 50V C365, 366 157546 0.068UF 50V C410, 428 271232 0.1UF 50V C361, 362 250066 0.15UF 100V C422 271233 Capacitors: Electrolytic 1UF 50V C307, 308, 414, 508 157563 1UF 160V C419, 445 271225 2.2UF 50V C440, 444 157672 4.7UF 50V C301, 302, 407, 420 157581 10UF 16V C519 157581 10UF 25V C517 271452 10UF 50V C353, 354 240462 10UF 100V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 16V C357, 358 157568 100UF 25V C309 157569 150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 25V	0.015UF 50V 0.039UF 50V	C409	152389	
0.068UF 50V C410, 428 271232 0.1UF 50V C361, 362 250066 0.15UF 100V C422 271233 Capacitors: Electrolytic 1UF 50V C307, 308, 414, 508 157563 1UF 160V C419, 445 271225 2.2UF 50V C440, 444 157672 4.7UF 50V C301, 302, 407, 420 157565 10UF 16V C519 157581 10UF 25V C517 271452 10UF 100V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 16V C357, 358 157568 100UF 25V C309 157569 100UF 35V C425 157570 150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 35V C356 271227 470UF 35V C515 150919 1000UF 10V C518	0.047UF 50V	C406, 446	251526	
Capacitors: Electrolytic 1UF 50V C307, 308, 414, 508 157563 1UF 160V C419, 445 271225 2.2UF 50V C440, 444 157672 4.7UF 50V C301, 302, 407, 420 157565 10UF 16V C519 157581 10UF 25V C517 271452 10UF 50V C353, 354 240462 10UF 100V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 16V C357, 358 157568 100UF 25V C309 157569 100UF 35V C425 157570 150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 35V C356 271227 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 25V C359, 360 271453 1000UF 25V C516 152567 <td>0.068UF 50V</td> <td>C410, 428</td> <td>271232</td>	0.068UF 50V	C410, 428	271232	
1UF 50V C307, 308, 414, 508 157563 1UF 160V C419, 445 271225 2.2UF 50V C440, 444 157672 4.7UF 50V C301, 302, 407, 420 157565 10UF 16V C519 157581 10UF 25V C517 271452 10UF 50V C353, 354 240462 10UF 100V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 16V C357, 358 157568 100UF 25V C309 157569 100UF 35V C425 157570 150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 16V C405 157630 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 16V C359, 360 271453 1000UF 25V C516 152567 1000UF 35V				
1UF 160V C419, 445 271225 2.2UF 50V C440, 444 157672 4.7UF 50V C301, 302, 407, 420 157565 10UF 16V C519 157581 10UF 25V C517 271452 10UF 100V C353, 354 240462 10UF 100V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 16V C357, 358 157568 100UF 25V C309 157569 100UF 35V C425 157570 150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 25V C356 271227 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 25V C516 152567 1000UF 35V C402 271229		ctrolytic		
2.2UF 50V C440, 444 157672 4.7UF 50V C301, 302, 407, 420 157565 10UF 16V C519 157581 10UF 25V C517 271452 10UF 50V C353, 354 240462 10UF 100V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 16V C357, 358 15768 100UF 25V C309 157569 100UF 35V C425 157570 150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 35V C356 271227 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 16V C359, 360 271453 1000UF 35V C402 271229				
10UF 16V C519 157581 10UF 25V C517 271452 10UF 50V C353, 354 240462 10UF 100V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 16V C357, 358 157568 100UF 25V C309 157569 100UF 35V C425 157570 150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 16V C405 157630 470UF 25V C356 271227 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 25V C516 152567 1000UF 35V C402 271229	2.2UF 50V	C440, 444	157672	
10UF 50V C353, 354 240462 10UF 100V C507 271226 22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 16V C357, 358 157568 100UF 25V C309 157569 100UF 35V C425 157570 150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 16V C405 157630 470UF 25V C356 271227 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 25V C516 152567 1000UF 35V C402 271229	10UF 16V	C519	157581	
22UF 250V C430 170419 47UF 16V C351, 352, 418 172074 100UF 16V C357, 358 157568 100UF 25V C309 157569 100UF 35V C425 157570 150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 16V C405 157630 470UF 25V C356 271227 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 25V C516 152567 1000UF 35V C402 271229	10UF 50V	C353, 354	240462	
100UF 16V C357, 358 157568 100UF 25V C309 157569 100UF 35V C425 157570 150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 16V C405 157630 470UF 25V C356 271227 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 25V C516 152567 1000UF 35V C402 271229	22UF 250V	C430		
100UF 25V C309 157569. 100UF 35V C425 157570 150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 16V C405 157630 470UF 25V C356 271227 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 16V C359, 360 271453 1000UF 25V C516 152567 1000UF 35V C402 271229				
150UF 400V C505 157792 220UF 25V C355 152565 220UF 160V C514 170851 470UF 16V C405 157630 470UF 25V C356 271227 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 16V C359, 360 271453 1000UF 25V C516 152567 1000UF 35V C402 271229		C309	157569	
220UF 160V C514 170851 470UF 16V C405 157630 470UF 25V C356 271227 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 16V C359, 360 271453 1000UF 25V C516 152567 1000UF 35V C402 271229	150UF 400V	C505	157792	
470UF 25V C356 271227 470UF 35V C515 150919 1000UF 10V C518 271228 1000UF 16V C359, 360 271453 1000UF 25V C516 152567 1000UF 35V C402 271229	220UF 160V	C514	170851	
1000UF 10V C518 271228 1000UF 16V C359, 360 271453 1000UF 25V C516 152567 1000UF 35V C402 271229	470UF 25V	C356	271227	
1000UF 25V	1000UF 10V	C518	271228	
	1000UF 25V	C516	152567	

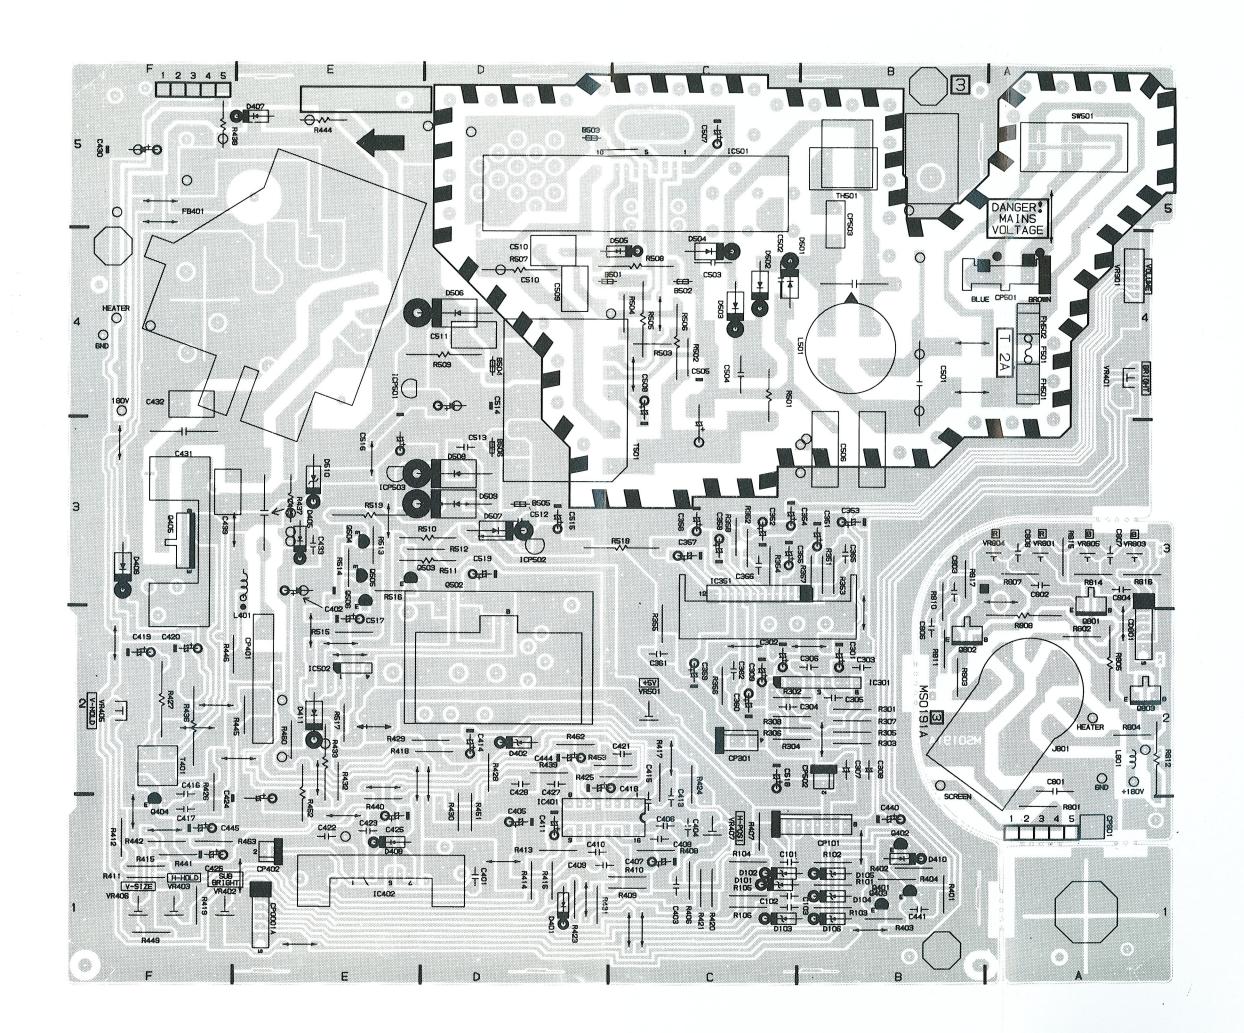

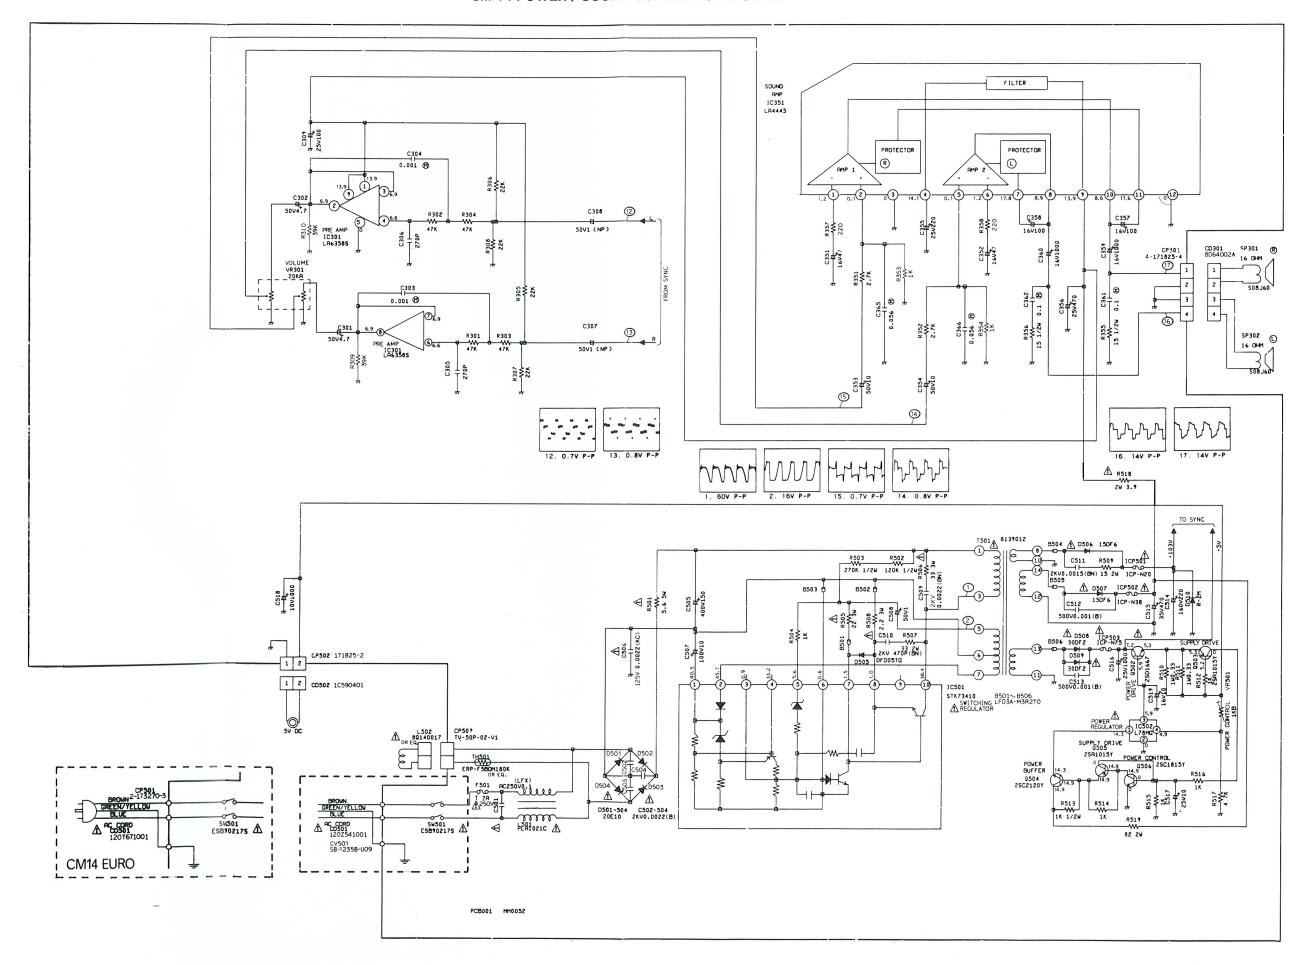

CM-14 MONITOR SCHEMATIC DIAGRAM

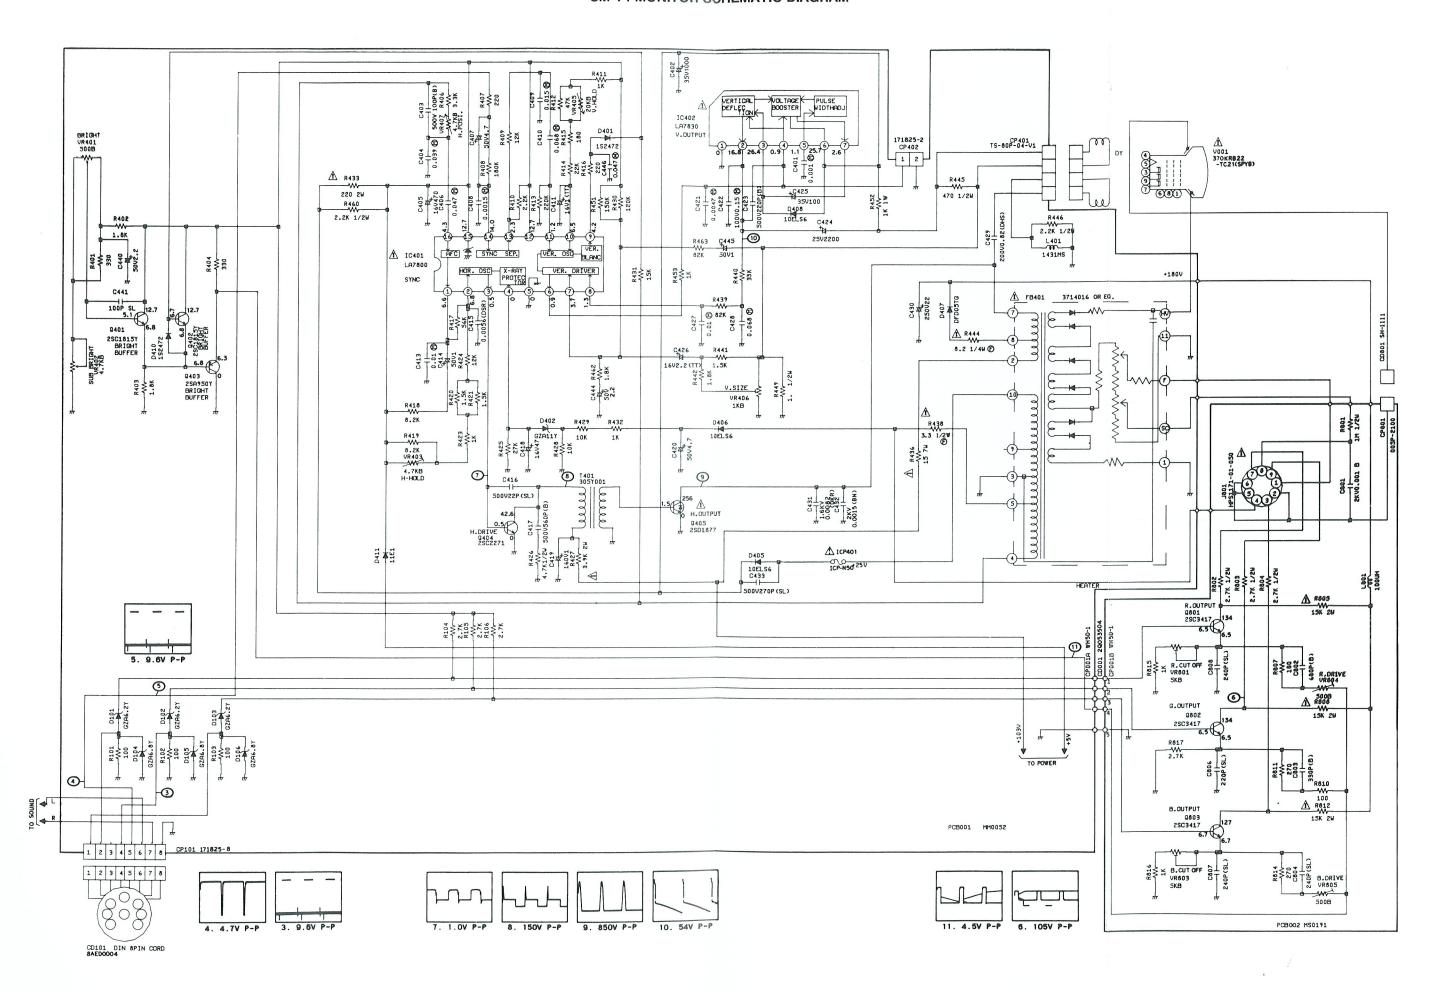

CM-14 CABINET EXPLODED VIEW

